

# Panasonic

## Operating Instructions

---

Digital Cordless Phone

Model No. **KX-TG1810NZ**



**This unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service.**

**Charge the batteries for about 7 hours before initial use.**

Please read these operating instructions before using the unit and save them for future reference.

## ***Introduction***

---

---

# **Introduction**

**Thank you for purchasing a new Panasonic digital cordless phone.**

**For your future reference**

Attach or keep original receipt to assist with any repair under warranty.

Serial No. (found on the bottom of the base unit)
Date of purchase
Name and address of dealer

**Note:**

- In the event of problems, you should contact your equipment supplier in the first instance.

## Feature highlights



### **Phonebook**

The phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers to the phonebook, assign each phonebook entry to the desired category, and search for phonebook entries by name or category.



### **Phonebook category**

If you subscribe to Caller ID service, phonebook categories (page 15) can help you identify who is calling by using different ringtones for different categories of callers (page 29).



### **Night mode**

Night mode allows you to select a block of time during which the handset/base unit will not ring, useful if you do not want to be disturbed, for example, while sleeping.

Night mode can be set independently for the handset (page 20) and base unit (page 25).



### **Polyphonic ringtones for handset**

You can change the ringtone heard when the handset rings for outside calls and intercom calls. You can choose from 5 ringtones and 10 melody tones (page 19).

## **Table of Contents**

---

### **Preparation**

Accessory information . . . . .	5
Important information . . . . .	6
Controls and displays . . . . .	7
Connections . . . . .	8
Battery installation . . . . .	9
Battery charge . . . . .	9
Battery replacement . . . . .	10
Turning the power on/off . . . . .	10
Setting the date and time . . . . .	10

### **Making/Answering Calls**

Making calls . . . . .	12
Answering calls . . . . .	14

### **Phonebook**

Using the phonebook . . . . .	15
Copying phonebook entries to other handsets . . . . .	17

### **Handset Settings**

Guide to handset settings . . . . .	18
Time settings . . . . .	19
Ringer setup . . . . .	19
Night mode . . . . .	20
Display setup . . . . .	21
Call options . . . . .	22
Other options . . . . .	22

### **Base Unit Settings**

Guide to base unit settings . . . . .	24
Ringer setup . . . . .	25
Call options . . . . .	26
Other options . . . . .	28

### **Caller ID Service**

Using Caller ID service . . . . .	29
Caller list . . . . .	30
Call minder . . . . .	31

### **Multi-unit Operation**

Operating additional units . . . . .	32
Registering a handset to a base unit . . . . .	32
Intercom between handsets . . . . .	34
Transferring calls between handsets, conference calls . . . . .	35

### **Useful Information**


Wall mounting . . . . .	36
Available character entries . . . . .	37
Troubleshooting . . . . .	39
Specifications . . . . .	42

### **Index**

Index . . . . .	43
-----------------	----

## Accessory information

### Included accessories

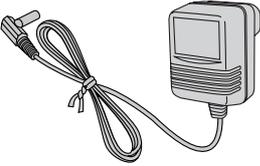AC adaptor PQLV19AL  	Telephone line cord  	Rechargeable batteries (AAA size) HHR-4EPT  
Handset cover  	Operating instructions  	Quick guide  

### Additional/replacement accessories

Model No.	Description
HHR-4EPT	2 rechargeable nickel metal hydride (Ni-MH) batteries
KX-TGA121AZ	Additional Digital Cordless Handset
KX-A272	DECT repeater

#### General Warning:

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

#### Important Notice:

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

---

### Important information

---

#### General

- Use only the AC adaptor included with this product, noted on page 5.
- Do not connect the AC adaptor to any AC outlet other than a standard 220–240 V AC outlet.
- This product is unable to make calls when:
  - The portable handset battery(ies) need recharging or have failed.
  - There is a power failure.
  - The key lock feature is turned on.
  - The call bar feature is turned on (only phone numbers stored in the unit as emergency numbers can be called).
- Do not open the base unit or handset other than to replace the battery(ies).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

---

#### Environment

- Do not use this product near water.
- This product should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the unit and is easily accessible.

#### Warning:

- To prevent the risk of electrical shock, do not expose this product to rain or any other type of moisture.

---

#### Location

- For maximum distance and noise-free operation, place your base unit:
  - Away from electrical appliances such as TVs, radios, personal computers or other phones.
  - In a convenient, high and central location.

---


#### Battery caution

- We recommend using the battery(ies) noted on page 5. **Use only rechargeable battery(ies).**
- Do not mix old and new batteries.
- Do not dispose of the battery(ies) in a fire, as they may explode. Check local waste management codes for special disposal instructions.
- Do not open or mutilate the battery(ies). Released electrolyte from the battery(ies) is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the battery(ies). Do not allow conductive materials such as rings, bracelets or keys to touch the battery(ies), otherwise a short circuit may cause the battery(ies) and/or the conductive material to overheat and cause burns.
- Charge the battery(ies) in accordance with the information provided in these operating instructions.
- Only use the included base unit (or charger) to charge the battery(ies). Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the battery(ies) to swell or explode.

## Controls and displays

### Controls

#### Handset

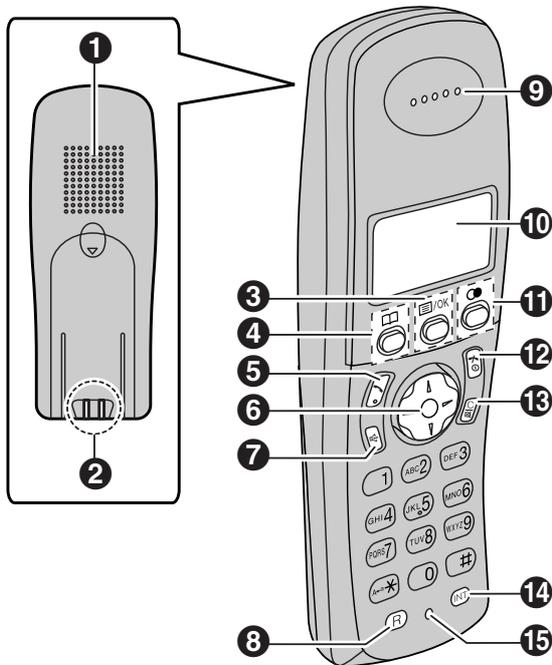


- ① Speaker
- ② Charge contact
- ③ [≡/OK] (Menu/OK)
- ④ [📖] (Phonebook)
- ⑤ [📞] (Talk)
- ⑥ Navigator key
  - [▲][▼]: To search for the desired item in menus.
  - [▶]: To select the desired item or move the cursor to the right.
  - [◀]: To return to the previous screen or move the cursor to the left.
- ⑦ [📞] (Speakerphone)
- ⑧ [R] (Recall)
- ⑨ Receiver
- ⑩ Display
- ⑪ [⏪] (Redial/Pause)
- ⑫ [🔌] (Off/Power)
- ⑬ [C/🔇] (Clear/Mute)
- ⑭ [INT] (Intercom)

#### ⑮ Microphone

##### Note:

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

#### Base unit

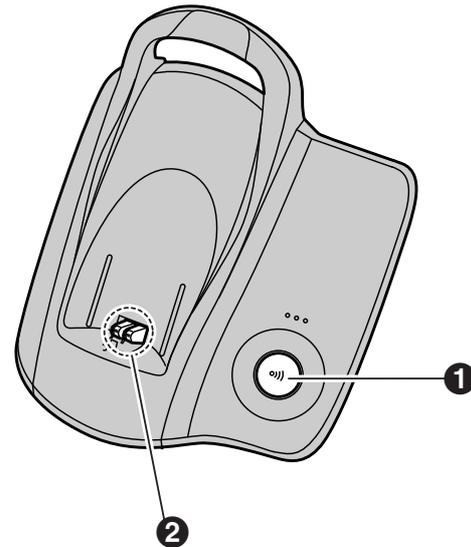

- ① [⏪] (Page)
- ② Charge contact

## Preparation

### Displays


#### Display icons

Various icons appear on the handset display to indicate the current status of the unit.

Display icon	Meaning
📶	Within range of a base unit <ul style="list-style-type: none"> <li>When flashing: Handset is searching for base unit. (out of range of base unit, handset is not registered to base unit, no power on base unit)</li> </ul>
📶	Handset is accessing base unit. (intercom, paging, changing base unit settings, etc.)
☎	Handset is on an outside call.
📶	Call bar is on. (page 22)
🔋	Battery strength
[VE]	Voice enhancer is set to high or low tone. (page 13)
[N]	Night mode is on. (page 20)
[X]	Key lock is on. (page 13)
[2]	Handset number: The left icon shows handset 2 example. (page 21)
-2-	Base unit number: The left icon shows base unit 2 example. (page 21)
✉	New call minder message received (call minder users only; page 31)
[IN USE]	Line is being used by another handset.

### Connections

When the AC adaptor is connected, a short beep will be heard. If it is not heard, check the connections.

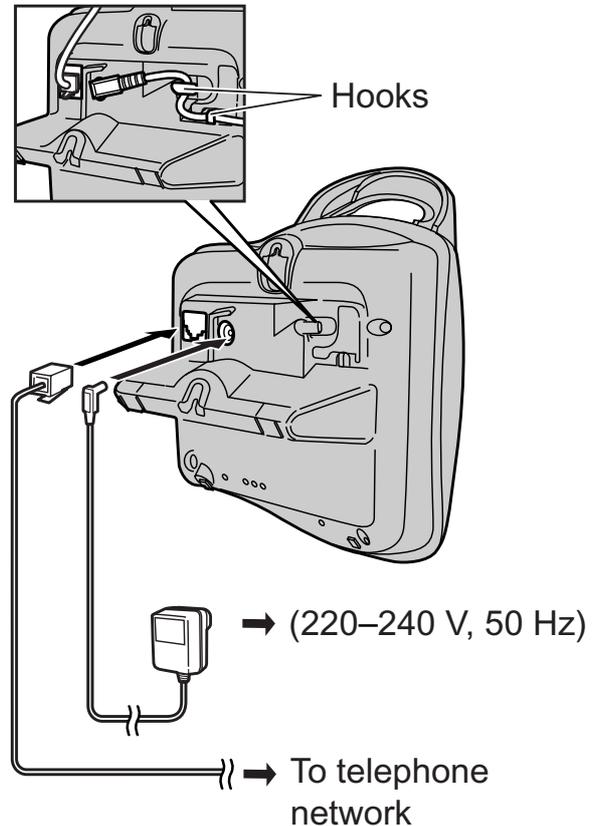

#### Important:


- Use only the AC adaptor and telephone line cord supplied with this unit.

#### Note:


- After connection, you must charge the batteries to make or answer calls (page 9).
- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

## Battery installation

- 1 Insert the batteries negative (⊖) terminal first.

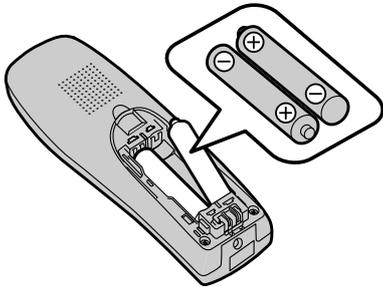

- 2 Close the handset cover.

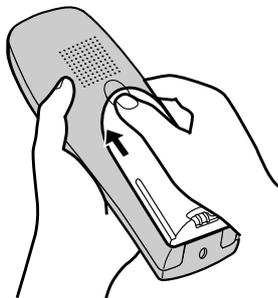

**Note:**

- Use only rechargeable batteries (page 5).


## Battery charge

Place the handset on the base unit for about 7 hours before initial use.

When charging, the battery icon is shown as follows.



When the batteries are fully charged,  remains on the display.

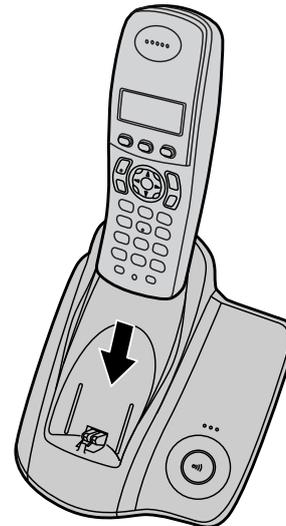

**Note:**

- It is normal for the handset to feel warm during charging.
- It takes 7 hours to fully charge the batteries, however, you can use the handset before the batteries are fully charged.
- Clean the charge contacts (page 7) of the handset and base unit with a soft, dry cloth once a month, otherwise the batteries may not charge properly. Clean more often if the unit is exposed to grease, dust or high humidity.

### Battery strength

Battery icon	Battery strength
	High
	Medium
	Low When flashing: Needs to be charged.

**Note:**

- When  flashes, recharge the handset batteries.  will continue to flash until the batteries have been charged for at least 15 minutes.

## Preparation

- If the handset is turned off, it will be turned on automatically when it is placed on the base unit.

### Battery life

After your Panasonic batteries are fully charged, you can expect the following performance:

#### Ni-MH batteries (700 mAh)

Operation	Operating time
While in use (talking)	20 hours max.
While not in use (standby)	170 hours max.

#### Note:

- Actual battery performance depends on a combination of how often the handset is in use (talking) and how often it is not in use (standby).
- Battery operating time may be shortened over time depending on usage conditions and ambient temperature.


## Battery replacement

If  flashes even after the handset batteries have been charged for 7 hours, the batteries must be replaced.

#### Important:

- We recommend the use of Panasonic rechargeable batteries noted on page 5. If you install non-rechargeable batteries and start charging, the batteries may leak electrolyte.
- Do not mix old and new batteries.

- 1 Press the notch on the handset cover firmly and slide it in the direction of the arrow.

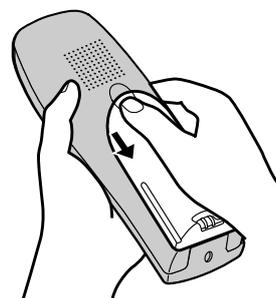

- 2 Remove the old batteries positive (+) terminal first and install the new ones. See page 9 for battery installation.

## Turning the power on/off

### Power on

Press [] for about 1 second.

- The display will change to the standby mode.

### Power off

Press [] for about 2 seconds.

- The display will go blank.

## Setting the date and time

#### Important:

- Confirm that the AC adaptor is connected.
- Ensure that  is not flashing.

- 1 Press [/OK].
- 2 Select "Handset Setup", then press [].
- 3 Select "Time Settings", then press [].
- 4 Select "Set Date & Time", then press [].

**5** Enter the current day, month and year by selecting 2 digits for each.

**Example:** 17 May, 2005

Press **[1][7] [0][5] [0][5]**.

**6** Enter the current hour and minute by selecting 2 digits for each.

- You can select “**AM**”, “**PM**” or 24-hour time entry by pressing **[\*]** repeatedly.

**Example:** 3:30 PM

Press **[0][3] [3][0]**, then press **[\*]** repeatedly until “**03 : 30 PM**” is displayed.

**7** Press **[☰/OK]**.

**8** Press **[\*⓪]**.

**Note:**

- To correct a digit, press **[◀]** or **[▶]** to move the cursor, then make the correction.
- The date and time may be incorrect after a power failure. In this case, set the date and time again.

---

### Making calls

- 1 Lift the handset and dial the phone number.
  - To correct a digit, press **[C/⊗]**, then enter the correct number.
- 2 Press **[↶]**.
- 3 When finished talking, press **[⏏]** or place the handset on the base unit.

---

### Speakerphone

The handset features a digital speakerphone, which allows you to have hands-free conversations.

- 1 During a conversation, press **[☎]** to turn on the speakerphone.
  - Speak alternately with the caller.
- 2 When finished talking, press **[⏏]** or place the handset on the base unit.

#### Note:

- For best performance, please note the following:
  - Use the speakerphone in a quiet environment.
  - If you or the other party have difficulty hearing each other, press **[▲]** or **[▼]** repeatedly to adjust the speaker volume as necessary.
- To switch back to the receiver, press **[↶]**.

---

### To adjust the receiver or speaker volume

Press **[▲]** or **[▼]** while talking. 4 volume levels are available for the receiver. 6 levels are available for the speaker.

---

### Redial feature

Previously dialled phone numbers (each 24 digits max.) can be redialled.

---

#### To redial the last number dialled

Press **[☎]**, then press **[↶]** or **[☎]**.

- If **[☎]** is pressed, the unit will redial automatically if the other party's line is engaged.

#### Note:

- You can also press **[↶]** or **[☎]** before pressing **[☎]**.

---

#### To make a call using the redial list

The last 10 phone numbers dialled are stored in the redial list.

- 1 Press **[☎]**.
  - The last number dialled will be displayed.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number.
  - To exit the list, press **[⏏]**.
- 3 Press **[↶]** or **[☎]**.
  - If **[☎]** is pressed, the unit will redial automatically if the other party's line is engaged.

---

#### To redial automatically

If you press **[☎]** when redialling and the other party's line is engaged, the unit will redial the phone number again automatically. The unit will redial up to 9 times. While the handset is waiting to redial, **[☎]** will flash. While the handset is redialling, mute is automatically turned on.

#### Note:

- Automatic redial is cancelled when any button (except **[☎]**) is pressed.
- If mute does not turn off after the line is connected, press **[C/⊗]**.

---

#### To edit a number in the redial list before calling it

- 1 Press **[☎]**.
- 2 Press **[▲]** or **[▼]** repeatedly to select the desired number, then press **[≡/OK]**.
- 3 Select "Edit and Call", then press **[▶]**.

- 4 Press [◀] or [▶] to move the cursor, then edit the number.
  - Place the cursor on the number you wish to erase, then press [C/⊗].
  - Place the cursor to the right of where you want to insert a number, then press the appropriate dial key.
- 5 Press [↶] or [↷].

---

### To erase numbers in the redial list

- 1 Press [☑].
- 2 Press [▲] or [▼] repeatedly to select the desired number, then press [≡/OK].
- 3 Select “Erase”, then press [▶].
  - If you want to erase all numbers in the list, select “Erase All”, then press [▶].
- 4 Select “Yes”, then press [▶].
- 5 Press [✕⊙].

---

### To store a number from the redial list into the phonebook

- 1 Press [☑].
- 2 Press [▲] or [▼] repeatedly to select the desired number, then press [≡/OK].
- 3 Select “Add Phonebook”, then press [▶].
- 4 Enter a name (16 characters max.; see page 37 for character entry), then press [≡/OK].
- 5 Edit the phone number if necessary, then press [≡/OK].
- 6 Select the desired category (page 15), then press [▶].
- 7 Select “Save”, then press [▶].
- 8 Press [✕⊙].

---

## Other features

---

### Voice enhancer

You can change the tone quality of the receiver while you are on a call. 3 settings are available.

- 1 Press [≡/OK] during a call.
- 2 Select the desired setting, then press [▶].

#### Note:

- If you select “High Tone” or “Low Tone”, “[VE]” is displayed.

---

### Mute

You can mute your voice during a conversation. While mute is turned on, you will be able to hear the other party, but the other party will not be able to hear you.

- 1 To mute your voice, press [C/⊗].
- 2 To return to the conversation, press [C/⊗] again.

---

### Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press [≡/OK] for about 2 seconds.

- “[X]” is displayed.
- To turn key lock off, press [≡/OK] for about 2 seconds.

#### Note:

- Calls to emergency numbers (page 26) cannot be made until key lock is turned off.
- Key lock is turned off when the handset is turned off.

---

### R button (to use the recall feature)

[R] is used to access optional telephone services. Contact your service provider for details.

## Making/Answering Calls

---

### Note:

- If your unit is connected to a PBX (private branch exchange), pressing **[R]** can allow you to access certain features of your host PBX such as transferring an extension call. Consult your PBX dealer for details.
- You can change the recall time (page 26).

---

### Call waiting

Call waiting is a service offered by your service provider whereby a second caller can be answered while online with the first caller. To answer the second caller, press **[R]**. To return to the first caller, press **[R]** again. Please consult your service provider for details of this service.

---

### Pause button (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service.

**Example:** If you have to dial **[0]** before dialling outside numbers manually, you will probably pause after dialling **[0]** until you hear a dial tone.

- 1 Press **[0]**.
- 2 Press **[⏸]**.
- 3 Dial the phone number, then press **[↶]** or **[↷]**.

### Note:

- Pressing **[⏸]** 1 time creates 1 pause. Press **[⏸]** repeatedly to create longer pauses. To change pause length, see page 26.

---

## Answering calls

- 1 Lift the handset and press **[↶]** or **[↷]** when the unit rings.
  - You can also answer a call by pressing any dial key from **[0]** to **[9]**, **[\*]**, **[#]**, or **[INT]**. (**Any key answer feature**)
- 2 When finished talking, press **[↶⊙]** or place the handset on the base unit.

---

### Auto talk feature

You can answer calls simply by lifting the handset off the base unit. You do not need to press **[↶]**. To turn this feature on, see page 22.

---

### To adjust the ringer volume when an outside call comes in

Press **[▲]** or **[▼]** when an outside call comes in.

### Note:

- The ringer volume cannot be adjusted if the handset is on the base unit.

---

## Other features

---

### Handset locator

Using this feature, you can locate the handset if it has been misplaced.

- 1 Press **[📞]** on the base unit.
  - The base unit will page the handset for about 1 minute.
- 2 To stop paging, press **[📞]** on the base unit or press **[↶⊙]** on the handset.

## Using the phonebook

The phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers to the phonebook, assign each phonebook entry to the desired category, and search for phonebook entries by name or category.

### Adding entries to the phonebook

- 1 Press [□□], then press [≡/OK].
- 2 Select “**New Entry**”, then press [▶].
- 3 Enter the party’s name (16 characters max.; see page 37 for character entry), then press [≡/OK].
- 4 Enter the party’s phone number (24 digits max.), then press [≡/OK].
- 5 Select the desired category for the entry, then press [▶].
- 6 Select “**Save**”, then press [▶].
- 7 Press [↶⊙].

**Note:**

- If there is no space to store new entries, “**Memory Full**” will be displayed. Erase unnecessary entries (page 16).

### To edit/correct a mistake

Press [◀] or [▶] to place the cursor on the number or character you wish to erase, then press [C/✕]. Place the cursor to the right of where you want to insert a number or character, then press the appropriate dial key.

**Note:**

- Press and hold [C/✕] to erase all numbers or characters.

## Categories

Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook you can assign it to the desired category. You can change the

names of categories assigned for phonebook entries (“Friends”, “Family”, etc.) and then search for phonebook entries by category. Additional category features are available for Caller ID subscribers (page 29).

### Changing category names

- 1 Press [□□], then press [≡/OK].
- 2 Select “**Category**”, then press [▶].
- 3 Select the category you want to change the name of, then press [▶].
- 4 Select “**Category Name**”, then press [▶].
- 5 Edit the name (10 characters max.; see page 37 for character entry), then press [≡/OK].
- 6 Press [↶⊙].

### Finding and calling a phonebook entry

Phonebook entries can be searched for by first character, by category, or by scrolling through all phonebook entries.

Once you have found the desired entry, press [↶] or [↷] to dial the phone number.

### Scrolling through all entries

- 1 Press [□□].
- 2 Press [▲] or [▼] repeatedly to display the desired entry.

### Searching by first character (index search)

- 1 Press [□□], then press [⊙].
- 2 Select “**Index Search**”, then press [▶].
- 3 Select the character entry mode that contains the character you are searching for, and press [▶].

## Phonebook

---

- 4 Press the dial key ([0] to [9]) which contains the character you are searching for (page 37).
  - Press the same dial key repeatedly to display the first entry corresponding to each letter located on that dial key.
  - If there is no entry corresponding to the letter you selected, the next entry will be displayed.
- 5 Press [▲] or [▼] repeatedly to scroll through the phonebook if necessary.

---

### Searching by category

- 1 Press [☐], then press [●].
- 2 Select “**Category Search**”, then press [▶].
- 3 Select the category you want to search, then press [▶].
  - The first entry in that category is displayed.
  - If you select “**All**”, the unit will end the category search.
- 4 Press [▲] or [▼] repeatedly to scroll through the phonebook if necessary.

---

### Editing entries in the phonebook

Phonebook entries can be edited after you have saved them. You can change the name, phone number, and category.

---

#### Changing a name, phone number, category

- 1 Find the desired entry (page 15), then press [☐/OK].
- 2 Select “**Edit**”, then press [▶].
- 3 Edit the name if necessary (16 characters max.; see page 37 for character entry), then press [☐/OK].
- 4 Edit the phone number if necessary (24 digits max.), then press [☐/OK].
- 5 Select the desired category, then press [▶].

- 6 Select “**Save**”, then press [▶].
- 7 Press [✕].

---

### Erasing entries from the phonebook

---

#### Erasing an entry

- 1 Find the desired entry (page 15), then press [☐/OK].
- 2 Select “**Erase**”, then press [▶].
- 3 Select “**Yes**”, then press [▶].
- 4 Press [✕].

---

#### Erasing all entries

- 1 Press [☐], then press [☐/OK].
- 2 Select “**Erase All**”, then press [▶].
- 3 Select “**Yes**”, then press [▶].
- 4 Select “**Yes**” again, then press [▶].
- 5 Press [✕].

---

### One touch dial

---

#### Assigning an entry in the phonebook to a one touch dial key

Dial keys [1] to [9] can each be used as a one touch dial key, allowing you to dial a number from the phonebook by simply pressing a dial key.

- 1 Find the desired entry (page 15), then press [☐/OK].
- 2 Select “**One Touch Dial**”, then press [▶].
- 3 Press [▲] or [▼] to select the desired dial key number, then press [▶].
  - When the dial key is already used as a one touch dial key, “\*” is displayed next to the dial key number. If you select this dial key, “**Overwrite**” is displayed. You can overwrite the previous assignment if necessary.

- If you do not wish to overwrite, select “Go Back”.

- 4 Select “Save”, then press [▶].
- 5 Press [↶⓪].

### Making a call using a one touch dial key

- 1 Press and hold the desired one touch dial key ([1] to [9]).
  - You can view other one touch dial assignments by pressing [▲] or [▼].
- 2 Press [↶] or [↷].

### Erasing a one touch dial assignment

- 1 Press and hold the desired one touch dial key ([1] to [9]).
- 2 Press [≡/OK], then press [▶].
- 3 Select “Yes”, then press [▶].

#### Note:

- Only the one touch dial assignment is erased. The corresponding phonebook entry is not erased.

### Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

- 1 While on a call, press [□□].
- 2 Press [▲] or [▼] repeatedly to select the desired entry.
  - To search by first character (index search), see page 15. To search by category, see page 16.
- 3 Press [▶] to dial the number.

## Copying phonebook entries to other handsets

Phonebook entries (page 15) can be copied from the handset to the phonebook of a compatible Panasonic handset.

### Copying one entry

- 1 Find the desired entry (page 15), then press [≡/OK].
- 2 Select “Copy”, then press [▶].
- 3 Enter the handset number you wish to send the phonebook entry to.
- 4 To continue copying another entry, select “Yes”, then press [▶]. Find the desired entry, then press [▶].
  - To finish copying, select “No”, then press [▶].
- 5 Press [↶⓪].

### Copying all entries

- 1 Press [□□], then press [≡/OK].
- 2 Select “Copy All”, then press [▶].
- 3 Enter the handset number you wish to send the phonebook entries to.
  - When all entries have been copied, “Completed” is displayed.
- 4 Press [↶⓪].

#### Note:

- If the other handset (the receiver) is not in standby mode, “Failed” is displayed on your handset (the sender).
- If copying failed after copying at least 1 entry, “Incomplete” is displayed on your handset (the sender).

### Guide to handset settings

For your reference, a chart of all items which can be customised for the handset is printed below.

- When customising the handset, the current item or setting is indicated by ►.

Handset settings menu	Sub-menu	Sub-menu 2	Default setting	Page	
Time Settings	Set Date & Time		—	page 10	
	Alarm		Off	page 19	
Ringer Setup	Ringer Volume		Maximum	page 19	
	Ext. Ringtone		Ringtone 1	page 19	
	Int. Ringtone		Ringtone 1	page 19	
	Night Mode	Start/End		23:00/06:00	page 20
		On/Off		Off	page 20
		Ring Delay		60 sec.	page 20
Select Category		—	page 21		
Display Setup	Standby Display		Off	page 21	
	Select Language		English	page 21	
	Contrast		Level 3	page 21	
Call Options	Call Bar		Off	page 22	
	Auto Talk		Off	page 22	
Registration	Register H.set		—	page 33	
Select Base	—		Auto	page 33	
Other Options	Handset PIN		0000	page 22	
	Keytones		On	page 22	
	Reset Handset		—	page 23	

**Note:**

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

---

## Time settings

---

### Alarm

An alarm will sound for 3 minutes at the set time once or daily. Set the date and time beforehand (page 10).

- 1 Press [≡/OK].
- 2 Select “**Handset Setup**”, then press [▶].
- 3 Select “**Time Settings**”, then press [▶].
- 4 Select “**Alarm**”, then press [▶] 2 times.
- 5 Select an alarm mode, then press [▶].
  - “**Once**”: The alarm will sound once at the set time. Enter the desired day and month by selecting 2 digits for each.
  - “**Daily**”: An alarm will sound daily at the set time.
  - “**Off**”: Turns the alarm off. Press [▶] again, then press [✕⓪] to finish.
- 6 Enter the desired hour and minute by selecting 2 digits for each.
  - You can select “**AM**”, “**PM**” or 24-hour time entry by pressing [✕] repeatedly.
- 7 Press [≡/OK].
- 8 Select the ringtone that will sound at the set time, then press [▶].
- 9 Select “**Save**”, then press [▶].
- 10 Press [✕⓪].

#### Note:

- To stop the alarm, press any dial key.
- When in talk or intercom mode, the alarm will not sound until the call has ended.
- The alarm will sound at the set time even when the ringer volume is turned off.
- If you select “**Once**”, the setting will change to “**Off**” after the alarm sounds.

---

## Ringer setup

---

### Ringer volume

- 1 Press [≡/OK].
- 2 Select “**Handset Setup**”, then press [▶].
- 3 Select “**Ringer Setup**”, then press [▶].
- 4 Select “**Ringer Volume**”, then press [▶].
- 5 Press [▲] or [▼] repeatedly to select the desired volume.
- 6 Press [▶].
- 7 Press [✕⓪].

#### Note:

- Alarms will sound and the handset will ring for intercom calls and when paged even if the ringer is turned off.

---

## Changing ringtones

You can change the ringtone used by the handset.

“**Ext. Ringtone**”: Selects the ringtone for outside calls.

“**Int. Ringtone**”: Selects the ringtone for intercom calls.

- 1 Press [≡/OK].
- 2 Select “**Handset Setup**”, then press [▶].
- 3 Select “**Ringer Setup**”, then press [▶].
- 4 Select the desired item, then press [▶].
- 5 Select the desired ringtone, then press [▶].
- 6 Press [✕⓪].

#### Note:

- If you select one of the melody ringtones, the ringtone will continue to sound for several seconds if the caller hangs up

## Handset Settings

---

before you answer. You may hear a dial tone or no one on the line when you answer a call.

- The preset melodies in this product are used with permission of © 2004 M-ZoNE Co., Ltd.

---

### Night mode

Night mode allows you to select a block of time during which the handset will not ring for outside calls. This feature is useful for times when you do not want to be disturbed, for example, while sleeping. Night mode can be set independently for the handset and the base unit (page 25).

Using the phonebook's category feature (page 15), you can also select categories of callers whose calls will override night mode and ring the handset (Caller ID subscribers only).

Set the date and time beforehand (page 10).

---

#### Setting the start and end time for night mode

- 1 Press [≡/OK].
- 2 Select "Handset Setup", then press [▶].
- 3 Select "Ringer Setup", then press [▶].
- 4 Select "Night Mode", then press [▶].
- 5 Select "Start/End", then press [▶].
- 6 Enter the desired hour and minute you wish to start this feature by selecting 2 digits for each.
  - If you use 12-hour time entry, select "AM" or "PM" by pressing [✳] repeatedly before entering the time.
- 7 Enter the desired hour and minute you wish to end this feature by selecting 2 digits for each.

- If you use 12-hour time entry, select "AM" or "PM" by pressing [✳] repeatedly before entering the time.

8 Press [≡/OK].

9 Press [✳⓪].

---

#### Turning night mode on/off

- 1 Press [≡/OK].
- 2 Select "Handset Setup", then press [▶].
- 3 Select "Ringer Setup", then press [▶].
- 4 Select "Night Mode", then press [▶].
- 5 Select "On/Off", then press [▶].
- 6 Select "On" or "Off", then press [▶].
- 7 Press [✳⓪].

#### Note:

- When the night mode is turned on, "[N]" is displayed.

---

#### Setting the ring delay for night mode

This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset will ring, useful when someone urgently needs to speak with you. If you select "No Ringing", the handset will not ring during night mode.

- 1 Press [≡/OK].
- 2 Select "Handset Setup", then press [▶].
- 3 Select "Ringer Setup", then press [▶].
- 4 Select "Night Mode", then press [▶].
- 5 Select "Ring Delay", then press [▶].
- 6 Select the desired setting, then press [▶].
- 7 Press [✳⓪].

---

### Selecting categories to bypass night mode

- 1 Press [≡/OK].
- 2 Select “Handset Setup”, then press [▶].
- 3 Select “Ringer Setup”, then press [▶].
- 4 Select “Night Mode”, then press [▶].
- 5 Select “Select Category”, then press [▶].
- 6 Press the desired category numbers, then press [≡/OK].
  - The selected category number will flash.
  - To cancel a selected category number, press the number again. The number will stop flashing.
- 7 Press [✕⓪].

#### Note:

- If a call is received from one of the categories set to bypass night mode, only the handset will ring.

---

## Display setup

---

### Selecting the standby mode display

“Base Number”: The current base unit number is displayed.

“Handset Number”: The current handset number is displayed.

“Off”: Only the current date and time are displayed.

- 1 Press [≡/OK].
- 2 Select “Handset Setup”, then press [▶].
- 3 Select “Display Setup”, then press [▶].

- 4 Select “Standby Display”, then press [▶].
- 5 Select the desired setting, then press [▶].
- 6 Press [✕⓪].

#### Note:

- If “Base Number” is selected and the current base unit number is 2, “-2-” is displayed.
- If “Handset Number” is selected and the current handset number is 2, “[2]” is displayed.

---

### Changing the display language

- 1 Press [≡/OK].
- 2 Select “Handset Setup”, then press [▶].
- 3 Select “Display Setup”, then press [▶].
- 4 Select “Select Language”, then press [▶].
- 5 Select the desired language, then press [▶].
- 6 Press [✕⓪].

#### Note:

- If you select a language you cannot read, press [✕⓪], [≡/OK], press [▲] 2 times, press [▶], press [▼] 2 times, press [▶], press [▼], press [▶], select the desired language, then press [▶]. Press [✕⓪].

---

### Changing the display contrast

- 1 Press [≡/OK].
- 2 Select “Handset Setup”, then press [▶].
- 3 Select “Display Setup”, then press [▶].
- 4 Select “Contrast”, then press [▶].

## Handset Settings

---

- 5 Press [**▲**] or [**▼**] repeatedly to select the desired contrast, then press [**▶**].
- 6 Press [**✕**].

---

## Call options

---

### Turning call bar on/off

This feature prohibits making outside calls. When call bar is turned on, only intercom calls and calls to emergency numbers (page 26) can be made.

- 1 Press [**≡**/OK].
- 2 Select “Handset Setup”, then press [**▶**].
- 3 Select “Call Options”, then press [**▶**].
- 4 Select “Call Bar”, then press [**▶**].
- 5 Enter “0000” (default handset PIN).
  - If you changed the PIN, enter it (page 22).
- 6 Select “On” or “Off”, then press [**▶**].
- 7 Press [**✕**].

#### Note:

- When call bar is turned on,  is displayed.

---

### Turning auto talk on/off

When this feature is turned on, you can answer calls simply by lifting the handset off the base unit. You do not need to press [**↶**].

- 1 Press [**≡**/OK].
- 2 Select “Handset Setup”, then press [**▶**].
- 3 Select “Call Options”, then press [**▶**].
- 4 Select “Auto Talk”, then press [**▶**].
- 5 Select “On” or “Off”, then press [**▶**].
- 6 Press [**✕**].

---

## Other options

---

### Changing the handset PIN (Personal Identification Number)

For security, the handset PIN must be entered when changing certain settings. The default PIN is “0000”.

#### Important:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press [**≡**/OK].
- 2 Select “Handset Setup”, then press [**▶**].
- 3 Select “Other Options”, then press [**▶**].
- 4 Select “Handset PIN”, then press [**▶**].
- 5 Enter the current 4-digit handset PIN.
- 6 Enter the new 4-digit handset PIN, then press [**≡**/OK].
- 7 Press [**✕**].

---

### Turning keytones on/off

Keytones are tones heard when keys are pressed. Includes confirmation tones and error tones.

- 1 Press [**≡**/OK].
- 2 Select “Handset Setup”, then press [**▶**].
- 3 Select “Other Options”, then press [**▶**].
- 4 Select “Keytones”, then press [**▶**].
- 5 Select “On” or “Off”, then press [**▶**].
- 6 Press [**✕**].

**Note:**

- If keytones are turned off, error tones will not sound when you enter the wrong PIN or when memory is full.

---

### Resetting the handset to its default settings

- 1 Press [☰/OK].
- 2 Select “**Handset Setup**”, then press [▶].
- 3 Select “**Other Options**”, then press [▶].
- 4 Select “**Reset Handset**”, then press [▶].
- 5 Enter “0000” (default handset PIN).
  - If you changed the PIN, enter it (page 22).
- 6 Select “**Yes**”, then press [▶].
- 7 Press [✕⓪].

**Note:**

- The following items will be deleted or reset to their default settings:
  - Settings listed on page 18
  - Redial list
  - Voice enhancer
  - Category names
  - Category ringtones
- The following items will be retained:
  - Phonebook entries (category names and ringtones will be reset to their default settings.)
  - Date and time

### Guide to base unit settings

For your reference, a chart of all items which can be customised for the base unit is printed below.

- When customising the base unit, the current item or setting is indicated by ►.

Base unit settings menu	Sub-menu	Sub-menu 2	Default setting	Page
Ringer Setup	Ringer Volume		Medium	page 25
	Night Mode	Start/End	23:00/06:00	page 25
		On/Off	Off	page 25
		Ring Delay	60 sec.	page 25
Call Options	Recall		600 msec.	page 26
	Pause Length		3 sec.	page 26
	Emergency No.		111, 911, 999	page 26
	ARS Settings	Area Code	—	page 27
	Call Restrict		—	page 27
Other Options	Base Unit PIN		0000	page 28
	Repeater Mode		Off	page 34
	Reset Base		—	page 28

**Note:**

- Up to 3 menu items can be displayed at a time. To select a menu item not shown on the current page, scroll up or down by pressing the navigator key, [▲] or [▼], respectively.

## Ringer setup

### Ringer volume

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select “Ringer Setup”, then press [▶].
- 5 Select “Ringer Volume”, then press [▶].
- 6 Press [▲] or [▼] repeatedly to select the desired volume.
- 7 Press [▶].
- 8 Press [✕⓪].

### Night mode

Night mode allows you to select a block of time during which the base unit will not ring for outside calls. This feature is useful for times when you do not want to be disturbed, for example, while sleeping. Night mode can be set independently for the handset (page 20) and the base unit. Set the date and time beforehand (page 10).

#### Setting the start and end time for night mode

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select “Ringer Setup”, then press [▶].
- 5 Select “Night Mode”, then press [▶].

- 6 Select “Start/End”, then press [▶].
- 7 Enter the desired hour and minute you wish to start this feature by selecting 2 digits for each.
  - If you use 12-hour time entry, select “AM” or “PM” by pressing [✕] repeatedly before entering the time.
- 8 Enter the desired hour and minute you wish to end this feature by selecting 2 digits for each.
  - If you use 12-hour time entry, select “AM” or “PM” by pressing [✕] repeatedly before entering the time.
- 9 Press [≡/OK].
- 10 Press [✕⓪].

#### Turning night mode on/off

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select “Ringer Setup”, then press [▶].
- 5 Select “Night Mode”, then press [▶].
- 6 Select “On/Off”, then press [▶].
- 7 Select “On” or “Off”, then press [▶].
- 8 Press [✕⓪].

#### Setting the ring delay for night mode

This setting allows the base unit to ring during night mode if the caller waits long enough. After the selected amount of time passes, the base unit will ring, useful when someone urgently needs to speak with you. If you select “No Ringing”, the base unit will not ring during night mode.

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].

## Base Unit Settings

---

- 3 Enter "0000" (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select "Ringer Setup", then press [▶].
- 5 Select "Night Mode", then press [▶].
- 6 Select "Ring Delay", then press [▶].
- 7 Select the desired setting, then press [▶].
- 8 Press [✕⓪].

---

## Call options

---

### Changing the recall time

Change the recall time, if necessary, depending on the requirements of your service provider or PBX.

- 1 Press [≡/OK].
- 2 Select "Base Unit Setup", then press [▶].
- 3 Enter "0000" (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select "Call Options", then press [▶].
- 5 Select "Recall", then press [▶].
- 6 Select the desired setting, then press [▶].
- 7 Press [✕⓪].

---

### Setting pause length

Change the pause length, if necessary, depending on the requirements of your service provider or PBX.

- 1 Press [≡/OK].
- 2 Select "Base Unit Setup", then press [▶].
- 3 Enter "0000" (default base unit PIN).

- If you changed the PIN, enter it (page 28).
- 4 Select "Call Options", then press [▶].
  - 5 Select "Pause Length", then press [▶].
  - 6 Select the desired setting, then press [▶].
  - 7 Press [✕⓪].

---

## Storing/changing emergency numbers

These settings determine which phone numbers can be dialled while the call bar feature is on (page 22).

- 1 Press [≡/OK].
- 2 Select "Base Unit Setup", then press [▶].
- 3 Enter "0000" (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select "Call Options", then press [▶].
- 5 Select "Emergency No.", then press [▶].
- 6 Select a memory location, then press [▶].
  - If the memory location already contains an emergency number, the number is displayed.
- 7 Enter/edit the number, then press [≡/OK].
  - To erase an emergency number, press and hold [C/⊗].
- 8 Press [✕⓪].

### Note:

- The default setting for emergency numbers are stored in the first 3 memory locations. It is recommended that you do not overwrite these numbers.

### Selecting area codes to be deleted automatically

In some situations, phone numbers stored automatically in the Caller ID list (page 30) will include area codes. If you do not want to dial the area codes when making calls from the Caller ID list, you can store the area codes which you want the unit to delete automatically.

**Example:** You have stored the area code "123". If you make a call from the Caller ID list to the phone number "123-456-7890", the unit dials "456-7890".

- 1 Press [≡/OK].
- 2 Select "Base Unit Setup", then press [▶].
- 3 Enter "0000" (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select "Call Options", then press [▶].
- 5 Select "ARS Settings", then press [▶].
- 6 Select "Area Code", then press [▶].
- 7 Select an area code location (1-4), then press [▶].
  - If the location already contains an area code, the code is displayed.
- 8 Enter an area code (5 digits max.), then press [≡/OK].
- 9 Press [✕⓪].

#### Note:

- The use of this feature can prevent a National Call from being dialled. E.g., in the case of the South Island, the "03" will be omitted and will therefore prevent a National Call to other areas of the South Island.

### Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and

select which handsets will be restricted. Storing area codes here will prevent the restricted handsets from dialling any phone number in that area code. If a restricted number is dialled, the call will not be connected and the restricted number will flash on the display.

- 1 Press [≡/OK].
- 2 Select "Base Unit Setup", then press [▶].
- 3 Enter "0000" (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select "Call Options", then press [▶].
- 5 Select "Call Restrict", then press [▶].
- 6 Set which handsets will be restricted by pressing the desired handset number.
  - All the registered handset numbers will be displayed.
  - Flashing numbers indicate call restriction is turned on for the corresponding handset.
  - To turn call restriction off for a handset, press the number again. The number will stop flashing.
- 7 Press [≡/OK].
- 8 Select a memory location, then press [▶].
  - If the memory location already contains a restricted number, the number is displayed.
- 9 Enter the phone number or area code to be restricted (8 digits max.), then press [≡/OK].
  - To erase a restricted number, press [C/⊗].
- 10 Press [✕⓪].

---

### Other options

---

#### Changing the base unit PIN (Personal Identification Number)

For security, the base unit PIN must be entered when changing certain settings. The default PIN is “0000”.

**Important:**

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it.
- 4 Select “Other Options”, then press [▶].
- 5 Select “Base Unit PIN”, then press [▶].
- 6 Enter the new 4-digit base unit PIN, then press [≡/OK].
- 7 Press [✕⓪].

---

#### Resetting the base unit to its default settings

- 1 Press [≡/OK].
- 2 Select “Base Unit Setup”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select “Other Options”, then press [▶].
- 5 Select “Reset Base”, then press [▶].
- 6 Select “Yes”, then press [▶].

- 7 Press [✕⓪].

**Note:**

- The following items will be deleted or reset to their default settings:
  - Settings listed on page 24
  - Caller list
- The following items will be retained:
  - Date and time
  - Repeater mode

---

---

### Using Caller ID service

#### Important:

- This unit is Caller ID compatible. To use Caller ID features (such as displaying caller phone numbers), you must subscribe to Caller ID service. Consult your service provider for details.

For all local and national incoming calls, your display will show the area code (e.g. 09 for Auckland) or the cellular prefix (e.g. 0274 for Telecom Cellular) followed by the caller's telephone number. An Auckland caller's number will be displayed as 09XXXXXXX. The seven X's represent the seven digits of the caller's telephone number. A caller from a 6-digit Telecom Cellular number will be displayed as 0274XXXXXX. For incoming international calls, your display may only show "0000". For business users on a Centrex line, your display will show Centrex extension numbers in the shorter extension number format used within your company.

---

#### Using toll services from Telecom or another company

Your telephone company may charge you for a local call if the number dialled has the area code prefix included. If this is unacceptable, dial only the 7-digit local number. Do not dial the **[0]** prefix or the area code.

---

#### Caller ID features

When an outside call is received, the caller's phone number can be displayed.

- Phone numbers of the last 50 different callers will be logged in the caller list.
- When caller information is received and it matches a phone number stored in the unit's phonebook:
  - The stored name will be displayed and logged in the caller list.
  - The handset will use the ringtone assigned to the caller's category.

- If the unit is connected to a PBX system, you may not receive the caller information.
- When the caller dialled from an area which does not provide Caller ID service, "Out of Area" will be displayed.
- When the caller requested not to send caller information, either no information or "Private Caller" will be displayed.

---

#### Missed calls

If a call is not answered, the unit treats the call as a missed call. The number of missed calls is shown on the display. This lets you know if you should view the caller list to see who called while you were out.

---

#### Category features for Caller ID subscribers

Categories can help you identify who is calling by using different ringtones for different categories of callers. When adding an entry to the phonebook you can assign it to the desired category (page 15). When a call is received from a caller assigned to a category, the category's ringtone you select is used.

---

#### Changing category ringtones

You can select a ringtone for each category. If you select "Ext. Ringtone", the unit will use the external ringtone you set on page 19 when calls from this category are received. The default setting is "Ext. Ringtone".

- 1 Press **[□□]**, then press **[≡/OK]**.
- 2 Select "Category", then press **[▶]**.
- 3 Select a category, then press **[▶]**.
- 4 Select the current setting of the category ringtone, then press **[▶]**.
- 5 Select the desired ringtone, then press **[▶]**.
- 6 Press **[✕○]**.

---

### Caller list

---

#### Viewing the caller list and calling back

Phone numbers of the last 50 different callers will be logged in the caller list. When the 51st call is received, the oldest caller information will be automatically erased. You can use this list to return missed calls.

- 1 Press [≡/OK].
- 2 Select "Caller List", then press [▶].
  - The most recent call is displayed.
- 3 Press [▼] repeatedly to search from the most recent call, or press [▲] repeatedly to search from the oldest call.
  - If the item has already been viewed or answered, "✓" is displayed, even if it was viewed or answered using another handset.
- 4 Press [↶] or [↷] to call back the displayed party.

#### Note:

- If you do not want to dial the area codes when making calls from the Caller ID list, you can store the area codes which you want the unit to delete automatically (page 27).

---

#### Editing a caller's phone number before calling back

The caller's telephone number, which is sent to your telephone from your local telephone exchange, includes "0" and an area code prefix. For local calls, "0" and the area code prefix can be omitted.

- 1 Press [≡/OK].
- 2 Select "Caller List", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry.

#### 4 To add a number

Press the dial key ([0] to [9]).

- The number you pressed is added to the top of the current number.

#### To erase a number

Press [≡/OK], select "Edit and Call", then press [▶].

Press [◀] or [▶] to place the cursor on the number you wish to erase, then press [C/✕].

- 5 Press [↶] or [↷].

---

#### Erasing caller information

- 1 Press [≡/OK].
- 2 Select "Caller List", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry, then press [≡/OK].
- 4 Select "Erase", then press [▶].
  - To erase all entries, select "Erase All", then press [▶].
- 5 Select "Yes", then press [▶].
- 6 Press [✕⓪].

---

#### Storing caller information into the phonebook

- 1 Press [≡/OK].
- 2 Select "Caller List", then press [▶].
- 3 Press [▲] or [▼] repeatedly to display the desired entry, then press [≡/OK].
- 4 Select "Add Phonebook", then press [▶].
- 5 Continue from step 3, "Adding entries to the phonebook", page 15.

---

---

## Call minder

Call minder is an automatic answering service offered by your service provider. If you subscribe to this service, your service provider's call minder system can answer calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by the service provider, not your telephone.

When you have new messages,  will be displayed on the handset.

Please consult your service provider for details of this service.

**Note:**

- If  still remains on the display even after you have listened to new messages, turn it off by pressing and holding **[C/ⓧ]** for 2 seconds.

---

### Operating additional units

---

#### Additional handsets

Up to 6 handsets can be registered to a single base unit. Additional handsets will give you the freedom to, for example, have an intercom call with another handset while a third handset is on an outside call. See page 5 for information on ordering additional handsets.

#### Important:

- The additional handset model recommended for use with this unit is noted on page 5. If other model handset is used, certain operations (handset settings, base unit settings, etc.) may not be available.

---

#### Additional base units

Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when “Auto” is selected on base unit selection (page 33), it will look for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a “radio cell”.

#### Note:

- Calls will be disconnected when the handset moves from one radio cell to another.
- Intercom calls and call transfers are only possible between handsets in the same radio cell.

---

### Registering a handset to a base unit

---

#### To register an additional handset to a base unit (easy registration)

The included handset and base unit are preregistered. After purchasing an additional handset, register it to the base unit. Ensure that the additional handset is switched on. If it is not on, press and hold **[⓪]** for few seconds to turn the handset on.

- 1 Lift the additional handset and press **[⓪]** to put the handset in standby mode.
- 2 Press and hold **[)]** on the base unit for about 3 seconds, until the registration tone sounds.
- 3 Place the additional handset on the base unit. The registration tone continues to sound. With the handset still on the base unit, wait until a confirmation tone sounds and **[]** stops flashing.

#### Note:

- If an error tone sounds, or if **[]** is still flashing, register the handset manually (manual registration; page 33).
- If all registered handsets start ringing in step 2, press **[)]** to stop. Start again from step 1.
- Charge the batteries of your additional handset for about 7 hours before initial use.
- This registration method cannot be used for handsets that have already been registered to a base unit. Register the handset manually (manual registration; page 33).

### To register a handset to an additional base unit (manual registration)

You can register a handset to a base unit manually using the following method.

- 1 Press **[☰/OK]**.
- 2 Select **“Handset Setup”**, then press **[▶]**.
- 3 Select **“Registration”**, then press **[▶]** 2 times.
- 4 Select a base unit number, then press **[▶]**.
  - This number is used by the handset as a reference only.
- 5 Press and hold **[📞]** on the base unit for about 3 seconds, until the registration tone sounds.
  - If all registered handsets start ringing, press **[📞]** to stop, then repeat this step.
  - After pressing **[📞]**, the rest of this procedure must be completed within 1 minute.
- 6 Wait until **“Enter Base PIN”** is displayed, then enter **“0000”** (default base unit PIN), then press **[☰/OK]**.
  - If you changed the PIN, enter it (page 28).
  - When the handset has been registered successfully, **Y** will stop flashing. If keytones are turned on (page 22), a confirmation tone will be heard.

### Selecting a base unit

When **“Auto”** is selected, the handset will automatically use any available base unit it is registered to. When a specific base unit is selected, the handset will make and receive calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

- 1 Press **[☰/OK]**.

- 2 Select **“Handset Setup”**, then press **[▶]**.
- 3 Select **“Select Base”**, then press **[▶]**.
- 4 Select the desired base unit number, or **“Auto”**, then press **[▶]**.
  - The handset starts searching for the base unit.

### Cancelling a handset

A maximum of 6 handsets can be registered to a base unit. A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This will allow the base unit to “forget” the handset.

- 1 Press **[☰/OK]**.
- 2 Select **“Base Unit Setup”**, then press **[▶]**.
- 3 Enter **“0000”** (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Enter **“335”**.
- 5 Select **“Cancel Handset”**, then press **[▶]**.
  - The numbers of all handsets registered to the base unit are displayed.
- 6 Select the handset(s) you want to cancel, by pressing the desired handset number.
  - The selected handset number(s) will flash.
  - To cancel a selected handset number, press the number again. The number will stop flashing.
- 7 Press **[☰/OK]**.
- 8 Select **“Yes”**, then press **[▶]**.
- 9 Press **[✕⓪]**.

## Multi-unit Operation

---

### Cancelling a base unit

A handset can be registered to a maximum of 4 base units. A handset can cancel a base unit that it is registered to. This allows the handset to “forget” the base unit.

- 1 Press [≡/OK].
- 2 Select “**Handset Setup**”, then press [▶].
- 3 Select “**Registration**”, then press [▶].
- 4 Enter “335”.
- 5 Select “**Cancel Base**”, then press [▶].
- 6 Enter “0000” (default handset PIN).
  - If you changed the PIN, enter it (page 22).
- 7 Select the base unit(s) you want to cancel, by pressing the desired base unit number.
  - The selected base unit number(s) will flash.
  - To cancel a selected base unit number, press the number again. The number will stop flashing.
- 8 Press [≡/OK].
- 9 Select “**Yes**”, then press [▶].
- 10 Press [✕⓪].

#### Note:

- To register the handset to another base unit or to the same base unit again, see manual registration (page 33).

---

### Increasing the range of the base unit

You can increase the range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on page 5. Consult your Panasonic dealer for details.

#### Important:

- Before registering the repeater to this base unit, you must turn the repeater mode on.

---

### Turning the repeater mode on/off

- 1 Press [≡/OK].
- 2 Select “**Base Unit Setup**”, then press [▶].
- 3 Enter “0000” (default base unit PIN).
  - If you changed the PIN, enter it (page 28).
- 4 Select “**Other Options**”, then press [▶].
- 5 Select “**Repeater Mode**”, then press [▶].
- 6 Select “**On**” or “**Off**”, then press [▶].
- 7 Press [✕⓪].

#### Note:

- After turning repeater mode on/off, you will not be able to make or receive calls for a few moments.

---

## Intercom between handsets

Intercom calls can be made between handsets in the same radio cell, but not between handsets in different radio cells.

**Example:** When handset 1 calls handset 2

- 1 **Handset 1:**  
Press [INT] and [2] (desired handset number).
- 2 **Handset 2:**  
Press [↶] or [📞] to answer.
- 3 When finished talking, press [✕⓪].

---

---

## Transferring calls between handsets, conference calls

Outside calls can be transferred between 2 handsets in the same radio cell. 2 handsets in the same radio cell can have a conference call with an outside party.

**Example:** When handset 1 transfers a call to handset 2

### 1 Handset 1:

During an outside call, press **[INT]** and **[2]** (desired handset number).

- The outside call will be put on hold.
- If there is no answer, press **[INT]** to return to the outside call.

### 2 Handset 2:

Press **[📞]** or **[📞]** to answer the page.

- Handset 2 can talk with handset 1.

### 3 Handset 1:

To complete the call transfer, press **[📞]**.

To establish a conference call, press **[3]**.

---

## Transferring a call without speaking to the other handset user

### 1 During an outside call, press **[INT]**, then press the desired handset number.

- The other handset rings if it is within range of the base unit and turned on.


### 2 Press **[📞]**.

- The outside call rings at the other handset.

### Note:


- **[📞]** flashes to indicate the outside call is on hold.
- If the other handset user does not answer the call within 1 minute, the call will ring at your handset again.

## Wall mounting

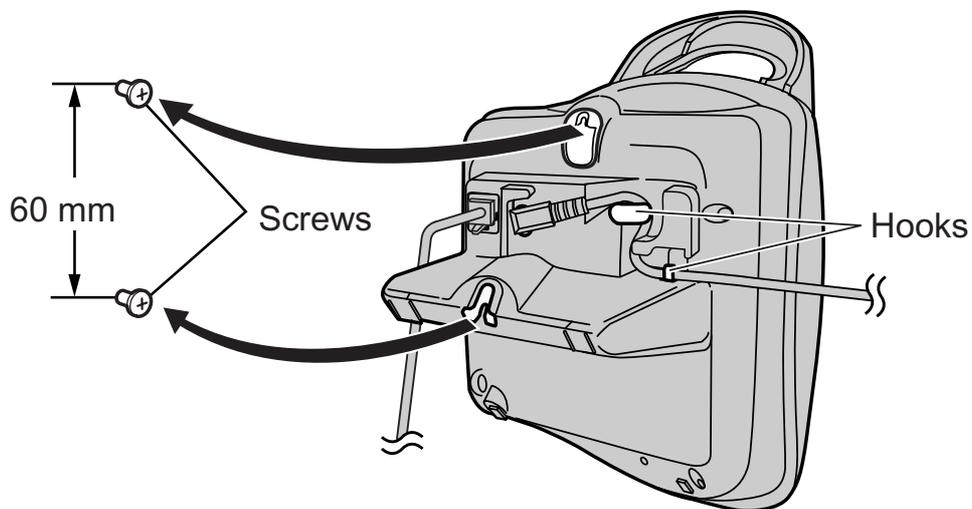

**Note:**

- Make sure the screws are securely fastened to the wall.
- Do not pinch the telephone line cord and AC adaptor cord between the base unit and the wall.
- Use the following wall template to position the screws before drilling.

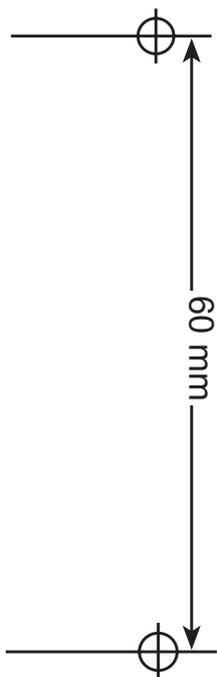

## Available character entries

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The available character entry modes are, Alphabet, Numeric, Greek, Extended 1, Extended 2, and Cyrillic. When in Alphabet (ABC), Greek (ABΓ), Extended 1 (AÄÅ), Extended 2 (SŠŠ), or Cyrillic (АБВ) character entry modes, you can select which character is entered by pressing a dial key repeatedly.

- When the unit displays the character entry screen:
  - Press [◀] or [▶] to move the cursor.
  - Press dial keys to enter characters and numbers.
  - Press [C/⊗] to erase the character or number highlighted by the cursor. Press and hold [C/⊗] to erase all characters or numbers.
  - Press [✱] to switch between uppercase and lowercase.
  - To enter another character located on the same dial key, press [▶] to move the cursor to the next space, then press the appropriate dial key.

## Character entry modes

Several character entry modes are available. When the unit displays the character entry screen, press [☐☐], then select a character entry mode, and press [▶]. The default mode is Alphabet.

### Alphabet character table (ABC)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' ( ) * , - . / 1	A B C 2	D E F 3	G H I 4	J K L 5	M N O 6	P Q R S 7	T U V 8	W X Y Z 9
		a b c 2	d e f 3	g h i 4	j k l 5	m n o 6	p q r s 7	t u v 8	w x y z 9

### Numeric entry table (0-9)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
0	1	2	3	4	5	6	7	8	9

### Greek character table (ABΓ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' ( ) * , - . / 1	A B Γ 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π Ρ Σ 7	T Υ Φ 8	X Ψ Ω Ξ 9

## Useful Information

### Extended 1 character table (AĂÄ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' ( ) * , - . / 1	A À Á Â Ã Ä Å Æ B C Ç 2	D E È É Ê Ë Ë F 3	G Ğ H I Ì Î Ï Ñ 4	J K L 5	M N Ñ O Ò Ó Ô Õ Ö ø 6	P Q R S Ş ß 7	T U Ù Ú Û Ü Û V 8	W Ŵ X Y ŷ Z 9
		a à á â ã ä å æ b c ç 2	d e è é ê ë ë f 3	g ğ h i ì î ï ñ 4	j k l 5	m n ñ o ò ó ô õ ö ø 6	p q r s ş ß 7	t u ù ú û ü û v 8	w ŵ x y ŷ z 9

- The following are used for both uppercase and lowercase:

ø Ş Ŵ ŷ

### Extended 2 character table (SŠŠ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0	Space # & ' ( ) * , - . / 1	A Á Ä Å B C Č Ć 2	D Ď E É Ě ě F 3	G H I Í 4	J K L Ł Ł Ł 5	M N Ń Ń O Ó Ö Ő 6	P Q R Ŕ Ŕ S Š Š 7	T Ť U Ú Ů ů ú v 8	W X Y ŷ Ý Z Ž Ž Ž 9
		a á ä Å b c Č Ć 2	d ě e é ě ě f 3	g h i í 4	j k l ł ł ł 5	m n ń ń o ó ö ő 6	p q r ŕ ŕ s š š 7	t ť u ú ú ů ů v 8	w x y ŷ ý z ž ž ž 9

- The following are used for both uppercase and lowercase:

Å Ć Č Ě Ł Ł Ł Ń Ŕ Š Š ů ŷ Ž Ž Ž

### Cyrillic character table (АБВ)

0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PQRS 7	TUV 8	WXYZ 9
Space 0 Г Є І Ї Ы	Space # & ' ( ) * , - . / 1	А Б В Г 2	Д Е Ж З 3	И Ы К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9

---



---

## Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the AC adaptor and turn off the handset, then reconnect the AC adaptor and turn on the handset.

---

### Initial settings

Problem	Cause & solution
<p>⚡ is flashing.</p>	<ul style="list-style-type: none"> <li>● The handset is not registered to the base unit. Register it (page 32).</li> <li>● The handset is too far from the base unit. Move closer.</li> <li>● The AC adaptor is not connected. Check the connections.</li> </ul>
<p>The handset display is blank.</p>	<ul style="list-style-type: none"> <li>● The handset is not turned on. Turn the power on (page 10).</li> </ul>
<p>The handset will not turn on.</p>	<ul style="list-style-type: none"> <li>● Make sure that the batteries are installed correctly (page 9).</li> <li>● Fully charge the batteries (page 9).</li> <li>● Clean the charge contact and charge again (page 9).</li> </ul>

### Telephone

Problem	Cause & solution
I cannot make or receive calls.	<ul style="list-style-type: none"> <li>● The AC adaptor or telephone line cord is not connected. Check the connections.</li> <li>● If you are using a BT double adaptor to connect the unit, remove the adaptor and connect the unit to the phone wall socket directly. If the unit operates properly, check or replace the adaptor.</li> <li>● Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider.</li> <li>● The call bar feature is turned on. Turn it off (page 22).</li> <li>● You dialled a call restricted number (page 27).</li> <li>● The key lock feature is turned on. Turn it off (page 13).</li> </ul>
The unit does not ring.	<ul style="list-style-type: none"> <li>● The ringer volume is turned off. Adjust the handset ringer volume (page 19) and the base unit ringer volume (page 25).</li> <li>● The night mode feature is turned on. Turn it off (page 20, 25).</li> </ul>
The batteries should be charging but the battery icon does not change.	<ul style="list-style-type: none"> <li>● Clean the charge contact and charge again (page 9).</li> <li>● The AC adaptor is disconnected. Plug in the AC adaptor.</li> </ul>
A busy tone is heard when  is pressed.	<ul style="list-style-type: none"> <li>● The handset is too far from the base unit. Move closer and try again.</li> <li>● Another handset is on an outside call. Wait for the other user to complete the call.</li> </ul>
Static is heard, sound cuts in and out. Interference from other electrical units.	<ul style="list-style-type: none"> <li>● Locate the handset and the base unit away from other electrical appliances.</li> <li>● Move closer to the base unit.</li> <li>● Your unit is connected to a telephone line with ADSL (JetStream) service. We recommend that you contact your ADSL service provider to have an ADSL Splitter installed. We do not recommend the use of generic ADSL filters.</li> </ul>
The handset stops working while being used.	<ul style="list-style-type: none"> <li>● Disconnect the AC adaptor and turn off the handset. Connect the AC adaptor, turn on the handset and try again.</li> </ul>

<b>Problem</b>	<b>Cause &amp; solution</b>
While storing an entry in the phonebook or assigning a one touch dial, the handset starts to ring.	<ul style="list-style-type: none"> <li>● A call is being received. To answer the call, press . Programming will be cancelled. Start again.</li> </ul>
Pressing  does not display/dial the last number dialled.	<ul style="list-style-type: none"> <li>● The redialled number was more than 24 digits long. Redial the number manually.</li> </ul>
The handset beeps intermittently and/or  flashes.	<ul style="list-style-type: none"> <li>● Fully charge the batteries (page 9).</li> </ul>
I fully charged the batteries, but  still flashes.	<ul style="list-style-type: none"> <li>● Clean the charge contact and charge again (page 9).</li> <li>● It is time to replace the batteries (page 10).</li> </ul>
Caller information is not displayed.	<ul style="list-style-type: none"> <li>● You must subscribe to Caller ID service.</li> <li>● Your unit is connected to a telephone line with ADSL (JetStream) service. We recommend that you contact your ADSL service provider to have an ADSL Splitter installed. We do not recommend the use of generic ADSL filters.</li> </ul>
While viewing caller information, the display returns to standby mode.	<ul style="list-style-type: none"> <li>● Do not pause for over 1 minute while searching.</li> </ul>
I cannot register a handset to a base unit.	<ul style="list-style-type: none"> <li>● The maximum number of base units (4) are already registered to the handset. Cancel unused base unit registrations from the handset (page 34).</li> <li>● The maximum number of handsets (6) are already registered to the base unit. Cancel unused handset registrations from the base unit (page 33).</li> <li>● You entered the wrong PIN number. If you forget your PIN, consult your nearest Panasonic service centre.</li> <li>● Locate the handset and the base unit away from other electrical appliances.</li> </ul>

---

---

### Specifications

■ **Standard:**

GAP (Generic Access Profile)

■ **Number of channels:**

120 Duplex Channels

■ **Frequency range:**

1.88 GHz to 1.9 GHz

■ **Duplex procedure:**

TDMA (Time Division Multiple Access)

■ **Channel spacing:**

1,728 kHz

■ **Bit rate:**

1,152 kbit/s

■ **Modulation:**

GFSK (Gaussian Frequency Shift Keying)

■ **RF transmission power:**

Approx. 250 mW

■ **Power source:**

220–240 V, 50 Hz

■ **Power consumption, Base unit:**

Standby: Approx. 3.5 W

Maximum: Approx. 9.2 W

■ **Operating conditions:**

5 °C–40 °C, 20 %–80 % relative air humidity  
(dry)

■ **Dimensions:**

**Base unit:** Approx. 111 mm × 121 mm ×  
123 mm

**Handset:** Approx. 148 mm × 48 mm ×  
32 mm

■ **Mass (weight):**

**Base unit:** Approx. 200 g

**Handset:** Approx. 130 g

**Note:**

- Specifications are subject to change.
- The illustrations used in these operating instructions may differ slightly from the actual product.

---

---

## Index

- A** Alarm: 19
  - Answering calls: 14
  - Auto talk: 14, 22
- B** Base unit
  - Additional base units: 32
  - Cancelling: 34
  - PIN: 28
  - Resetting: 28
  - Selecting: 33
  - Settings: 24Battery
  - Charge: 9
  - Installation: 9
  - Life: 10
  - Replacement: 10
  - Strength: 9
- C** Call bar: 22
  - Caller ID service: 29
  - Call minder: 31
  - Call restriction: 27
  - Call waiting: 14
  - Category: 15
    - Ringtones: 29
  - Chain dial: 17
  - Character entry: 37
  - Conference calls: 35
  - Connections: 8
- D** Date and time: 10
  - Display
    - Contrast: 21
    - Icons: 8
    - Language: 21
    - Standby mode: 21
- E** Emergency numbers: 26
- H** Handset
  - Additional handsets: 32
  - Cancelling: 33
  - Locator: 14
  - PIN: 22
  - Power on/off: 10
  - Registration: 32
  - Resetting: 23
  - Settings: 18
- I** Intercom: 34
- K** Key lock: 13
  - Keytones: 22
- M** Making calls: 12
  - Missed calls: 29
  - Mute: 13
- N** Night mode
  - Base unit: 25
  - Handset: 20
- O** One touch dial: 16
- P** Pause: 14, 26
  - Phonebook: 15
    - Copying: 17
    - Editing: 16
    - Erasing: 16
    - Making calls: 15
    - Storing: 15
  - PIN
    - Base unit: 28
    - Handset: 22
  - Power on/off: 10
- R** Recall: 13, 26
  - Redialling: 12
  - Redial list: 12
  - Registration: 32
  - Repeater: 34
  - Ringtones: 19
- S** Speakerphone: 12
- T** Transfer calls: 35
- V** Voice enhancer: 13
  - Volume
    - Receiver: 12
    - Ringer (Base unit): 25
    - Ringer (Handset): 19
    - Speakerphone: 12
- W** Wall mounting: 36

**Customer Support Centre Tel. No.: (09) 272 0178**

**Sales Department:**

**Panasonic New Zealand Ltd.**

350 Te Irirangi Drive  
East Tamaki  
Private Bag 14911  
Panmure  
Auckland  
NEW ZEALAND

**Panasonic Communications Zhuhai Co., Ltd.**

3 Ping Xi 8 Lu, Nanping Keji Gongye Yuan, Zhuhai, Guangdong, China 519060

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.