Important Information

Before you use your device, please read the Important *Information* provided in your device regarding warranty, safety and handling information.

Protecting your device from water and dust


Your device has IP (Ingress Protection) ratings of IP65 and IP68. These ratings mean that your device is dust tight and is protected against low pressure water stream as well as against the effects of submersion for 30 minutes in fresh (non-saline) water up to 1.5 metres deep.


Always firmly attach all covers to ensure the water and dust resistance of the device. If liquid is detected inside the device, for example, underneath one of the covers, your warranty will be void.

Before using your device in water and in dusty conditions, refer to the relevant section of the User guide for your device for more detailed information. An online User quide as well as a downloadable version is available at www.sonymobile.com/support.

¶ After using your device in water, wait for the USB port to dry before you insert a cable into the port.

Overview

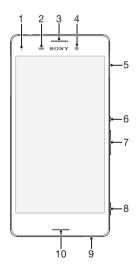

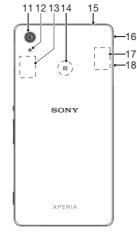

- 1. Charging/Notification 8. Camera key
- 2. Proximity/Light sensor
- 3. Ear speaker
- 4. Front camera lens
- 5. Nano SIM card slot cover
- 6. Power key
- 7. Volume/Zoom key
- 9. Loudspeaker 10. Main microphone
- 11. Main camera lens
- 12. Camera light
- 13. GPS antenna area
- 14. NFC™ detection area
- 15. Headset jack
- 16. Charger/USB cable port
- 17. Wi-Fi/Bluetooth antenna
- 18. Cover for memory card slot

Assembly

¶ Your device only supports nano SIM cards.



Don't confuse the nano SIM card slot with the memory card slot. Inserting a card in the wrong slot could damage both the card and your device.

To insert the nano SIM card

- If you insert the nano SIM card while the device is powered on, the device restarts automatically.
- 1 Detach the cover for the nano SIM card slot.
- 2 Insert the nano SIM card into the nano SIM card slot.
- 3 Re-attach the cover.

To insert the memory card


- 1 Remove the memory card slot cover.
- 2 With the gold coloured contacts facing down, insert the memory card into the memory card slot, then re-attach the memory card slot cover.

Basics

Turning on the device

Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

To turn on the device

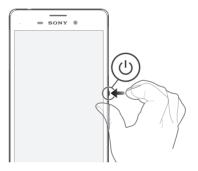

- 1 Press and hold down the power key (1) until the device
- 2 Wait a while for the device to start.

Waking up the screen

To activate the screen

Briefly press the power key (1).

Setting up your device

Setup guide

The first time you start your device, a setup guide opens to help you configure basic settings, sign in to some accounts (for example, your Google™ account), and personalise your device. You can also manually access the setup guide at a

To access the setup guide manually

- 1 From the Home screen, tap
- 2 Tap > Setup guide.

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Application screen and the Quick settings panel.

To access your device settings

- 1 From your Home screen, tap
- 2 Find and tap .

Transferring your contacts

Xperia[™] Transfer is an application that helps you to collect contacts from your old device and transfer them to your new device. Xperia[™] Transfer, which you can access from within the PC Companion and the Sony Bridge for Mac computer programs, supports mobile devices that run on several operating systems, including iOS, Android™, Windows® and BlackBerry™.

To use Xperia™ Transfer, you need:

- · An Internet-connected computer.
- · A USB cable for your old device.
- A USB cable for your new Android™ device.
- Your old device.
- Your new Android™ device.

 
To transfer contacts to your new device

- Search and download PC Companion (on a PC) or Bridge for Mac (on a Mac computer) from www.sonymobile.com if the application is not already installed.
- 2 After successful installation, open the PC Companion application or the Sony Bridge for Mac application, then click *Xperia™ Transfer* and follow the relevant instructions to transfer your contacts.

Finding your way



Using the keys



← Back navigation key

Go back to the previous screen within an application or close the application.

△ Home navigation key

 
Exit an application and go back to the Home screen.

· Open the recently used applications window and the small apps bar.

Application screen

Open the Application screen.

Basic applications and settings



Use the Messaging application to send and receive text and multimedia messages.

Go to Google Play™ to download free and paid applications for your device.

Optimise the device settings to suit your own requirements.

Notifications and quick settings

To open or close the Notification panel



Support on the web



Visit www.sonymobile.com/support to access a range of support options for your device, including downloads, troubleshooting tips and a User guide.

Legal information

Sony E2303/E2306/E2353

Publication number: 1292-5290 1

Publication number: 1292-229U.1 This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

 
See regulatory information such as the CE mark in the relevant label tray in the device.

See regulatory information such as the CE mark in the relevant label tray in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/Segal/for more information.

Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications inc., 14-15 forana, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications inc., 14-15 forana, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications inc., 14-15 forans, Minato-ku, Tokyo 108-0075, Japan. For any service or guarantee matters, please refer to the confidence of the confidence of

To view the CE mark and the FCC ID



- 1 Detach the memory card slot cover.
- 2 Insert the tip of an unfolded paper clip (or a similar object with a long, fine tip) into the hole in the label tray, then drag the tray outwards. The information is displayed on the tray.

To view the regulatory compliance mark

• Open the phone dialer, then enter *#07#.

SONY

Startup guide

Xperia™ M4 Aqua E2303/E2306/E2353

XPERIA

Sony Mobile Communications Inc. 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan



1292-5290.1 Printed in XXX (Printers logotype)