



SPARK PLUS 3


Quick Start Guide



Contents

1. Your mobile phone	3
2. Setting up your device	4
2.1 Inserting the SIM card and the Micro SD card	4
2.2 Charging your device	4
2.3 Switching your device on/off	5
2.4 Standby mode	5
3. Start-up	6
3.1 Starting up for the first time	6
3.2 Managing the home screen	8
3.3 Customising basic settings	11
3.4 PC connection and file transfer	13
3.5 Activating WiFi and Bluetooth	14
3.6 Phone icons	15
4. Telephone mode	16
4.1 Managing contacts	16
4.2 Making/answering calls	17
4.3 Text/multimedia messages	19
5. Internet/e-mail	20
5.1 Gmail™ messaging	20
5.2 Browsing the Internet	20
6. Apps	21


1. Your mobile phone

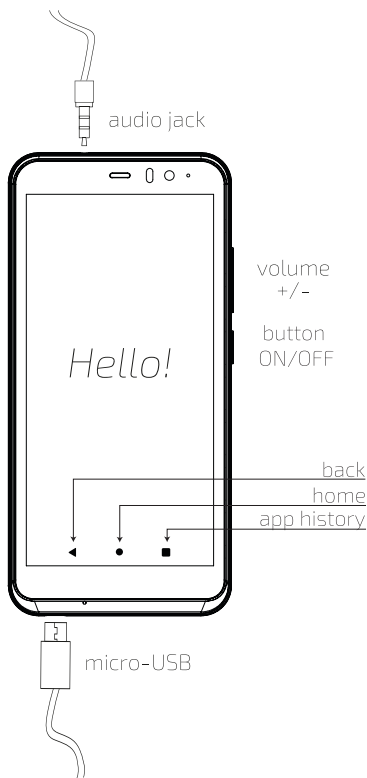

2. Setting up your device

2.1 Inserting the SIM card and the Micro SD card

1. Remove the battery cover. If the battery is installed, remove it.

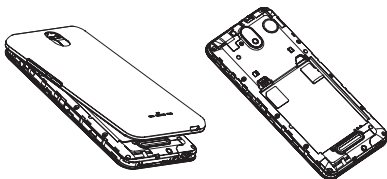

2. Place the Micro SIM card and Micro SD card as shown on the back of the device.
3. Put the cover back in place and press the ends so that it snaps onto the phone.

2.2 Charging your device

1. Connect the charger to an AC outlet.
2. Use the charger provided to charge your phone. Connect the USB microphone to the phone.

Note: A charging notification appears on the phone's screen to indicate the battery's status.

2.3 Switching your device on/off

1. To switch on your device, press and hold the 'on/off' button on the right hand side of the device until the screen lights up.
2. Once the device has started up, enter the PIN code, if prompted, for your SIM card, as shown below:



3. Press and hold the 'on/off key' to turn off the phone. Then press 'Power off'.

2.4 Standby mode




1. When the device is on standby, press the 'on/off' button on the right hand side of the device to display the lock screen.
2. From the lock screen, slide your finger from the 'lock' icon to the top of the screen.

3. Start-up

3.1 Starting up for the first time

1. A configuration wizard will be displayed when you start up your device for the first time. Start by selecting your language.

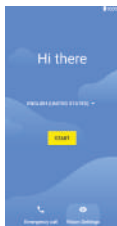

2. We then recommend you to customise your device with your Google™ account, or by creating a new free account. Pairing a Google account with your phone enables you to benefit from all of your phone's functions and services, such as synchronising and backing up your Gmail data (e-mails, contacts, calendar, files), access Google Maps, Google Play...

Note: You can only sync your phone to your Google Account if you are connected to a WiFi or mobile data network.



3. In the Google Services list, select the ones you want by activating them with the switch. Tap Accept when you have finished.



4. You can secure your data with a password or pattern. You will be prompted to enter this each time you wake your device from sleep mode, or when your device powers up.

3.2 Managing the home screen


1. The home screen consists of multiple consecutive screens through which you can install your apps and/or shortcuts. These screens are displayed by swiping right from one screen to the next. You can also add more screens by sliding an app or a widget to the right from the last screen.



2. All applications installed on the phone can be accessed through the Applications menu. Scroll up the menu by sliding your finger towards the top of the screen.



Apps installed on the
Home screen

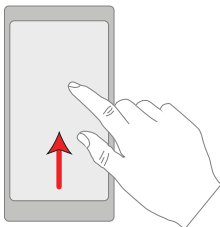

Scroll up the Applica-
tions menu.

3. To change the position of your apps or shortcuts on the home screen, press and hold the app icons and drag to the location of your choice. If you wish to delete an app from the Home screen, press and hold the icon and drag it to the part of the screen showing 'Delete'.





Drag the app to position it on the screen.



Drag the app to the top of the screen to delete it.

4. All your device notifications (missed calls, messaging, e-mail, texts, USB connection, etc.) appear in the notification bar at the top of the screen. Swipe this bar downwards and tap one of the notifications to view its details, as shown below:

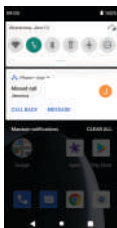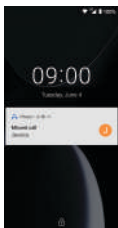

5. To quickly change the background or add shortcuts, press and hold any empty area on the home screen until the following notification is displayed:



Choose an image from the backgrounds already installed on your phone or from your own images available in the 'Gallery'




Choose a shortcut or widget from those shown and press and hold it to put it on one of the home screens.

3.3 Customising basic settings (audio, display, date/time)

1. To customise the various settings on your device, go to the settings menu as follows:



1. Slide your finger from the bottom to the top of the screen.

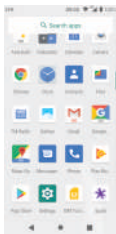

2. Touch the Settings icon.



3. Touch the menu you are interested in.



To change the phone's sounds:

1. From the Applications menu, select 'Settings'.
2. Select the 'Sound' menu.
3. Set volumes, ringtones and other settings. Use the sliders to change the volumes of the different sounds on your phone.

4. Use the Display menu to set the display options for the background, screen saver, etc.
5. Set your time and date preferences in the 'Date and time' menu:





6. From the notifications bar, you can access a number of shortcuts that allow you to enable/disable:

- WiFi,
- Bluetooth,
- Flight mode, etc.

Note: Tap the Mobile data icon to disable the mobile data connection in this menu if you are travelling abroad and do not want to pay a connection fee that is not included in your package.

Simply slide your finger down twice to access all these settings.

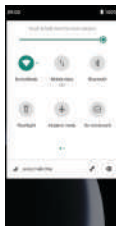
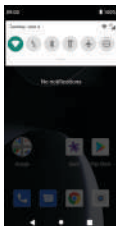


3.4 PC connection and file transfer

1. Using a USB to micro USB cable, connect your phone to your computer to transfer any type of file (photos, music, etc.) from your computer to your phone and vice versa. Your phone will be identified as a multimedia peripheral by your computer, which allows you to copy/paste files from your PC to your phone.

2. Use the notification bar to verify that you are in 'File transfer (MTP)' mode, so that the internal and external memories (Micro SD card) can be accessed from your computer.

If you want to access only those pictures taken with the camera, you can choose the 'Transfer pictures (PTP)' option to accommodate that.

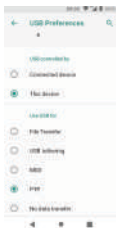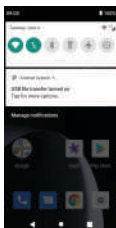

3.5 Activating WiFi and Bluetooth

1. To activate WiFi on your phone, access the 'WiFi' menu in the 'Network and Internet' menu.



Turn WiFi on by tapping the toggle button.




















If the network is encrypted, enter the password (or WEP key)

2. To activate Bluetooth on your phone, access the 'Bluetooth' menu in the 'Connected devices' menu.




3.6 Phone icons

	Signal strength indicator		Missed call
	No signal		New voice message
	Flight mode		New text/multimedia message
	Roaming network coverage		New e-mail
	WiFi activated		USB connected
	WiFi hotspot		Downloading
	Bluetooth activated		Synchronising
	Battery level		Alarm
	Battery charging		

Note: The '2G/3G/4G/...' icons appear next to the signal reception indicator to indicate the network coverage mode used by your phone.




Call Text/multimedia messages

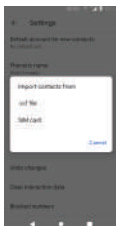

Select 'Settings', and then 'Import'.

2. You can create a new contact and save it in one of your lists. To do this, click on the '+' bottom icon (add contact), select the list in which you want to save your contact, and then fill in the fields:

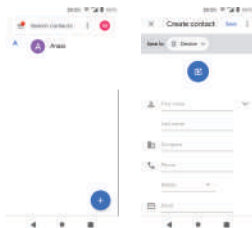

4.2 Making/answering calls

1. If you want to make a call, start the Phone app. This menu allows you to call a number from the call history, enter a number directly using the touchscreen keypad or choose a number from your contacts list by sliding your finger on the screen from right to left.



Press this icon to access the dialer

2. When you receive a call, slide your finger towards the top of the phone to answer. To reject a call, slide your finger down the screen. To send an automatic SMS, tap the messages icon at the bottom left of the screen and slide your finger up.



Answer call




Send automatic text message



Note: When the screen is on, the incoming call notification appears at the top of the screen. You can pick up the call directly and if you want to access the complete call interface, just click on this notification.

4.3 Text/multimedia messages

To send an SMS/MMS, you must go to the SMS/MMS menu, click on the icon at the bottom right of the 'new message' screen, and fill in the 'To' and 'Compose SMS' fields, as indicated below:

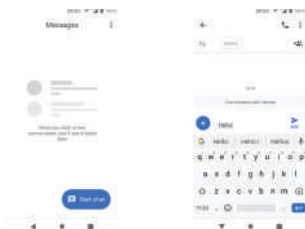

Enter the contact's number or search for it in the contact list

Tap  to send.


Note: If you attach a file, such as an image or a video, your message will be treated as an MMS (multimedia message).

5. Internet/e-mail

5.1 Gmail messaging

Note: Once an account is set up, when you first use the Gmail app, you need to sync your account to continue.



1. Once an account is linked to the Gmail app, launch this app to manage your e-mails.

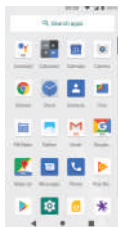

2. If you have not configured your Google account, you can always create one by launching the Gmail app for the first time.

5.2 Browsing the Internet

To browse the Internet, launch the Chrome™ app. Then enter a search term or the website address directly in the address bar.

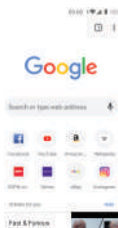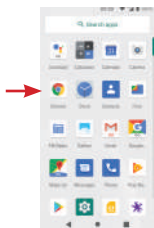

Make sure you have a data connection or a WiFi connection before browsing the Internet.

6. Apps

You will find Google services pre-installed on your device:



Gmail is Google's e-mail service



Take advantage of map and GPS services with Google Maps Go and Navigation



Google Play provides access to films, music, apps and more to download.



YouTube™ lets you view, send and share videos



Chrome is the web browser provided by Google



View and organise all of your photos

Google, Android, Google Play, YouTube and the other trademarks are all trademarks of Google LLC.



Spark^{nz}

