

# Uniden®

## DECT 1515 Series

---

For more exciting new products please visit our website:

Australia: [www.uniden.com.au](http://www.uniden.com.au)

New Zealand: [www.uniden.co.nz](http://www.uniden.co.nz)

---

# OWNER'S MANUAL

# Important Safety Instructions!

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- **This unit is NOT waterproof.** DO NOT expose this unit to rain or moisture.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not place the handset in any charging cradle without the battery installed and the battery cover securely in place.

## SAVE THESE INSTRUCTIONS!

**CAUTION! Risk of explosion if battery is replaced by an incorrect type! Dispose of used batteries according to the instructions. Do not open or mutilate the battery. Disconnect the battery before shipping this product.**

## Important Notice:


- Under power failure conditions this appliance may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

## General Notices for New Zealand Model:

- The grant of a NZ Telepermit for any item of terminal equipment indicates only that Spark has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Spark, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Spark's network services.
- The maximum volume setting of this telephone exceeds the Spark specified volume requirement. Spark takes no responsibility for the high volume available on this telephone, customer's who believe this telephone is too loud should contact the manufacturer at the website indicated on owner's manual warranty page.
- For telephone networks other than Spark there may be a charge incurred for local calls if the Insert 0 feature is on. Turn Insert 0 off.
- This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

# DECT 1515 Series Owner's Manual

## What's in the box?

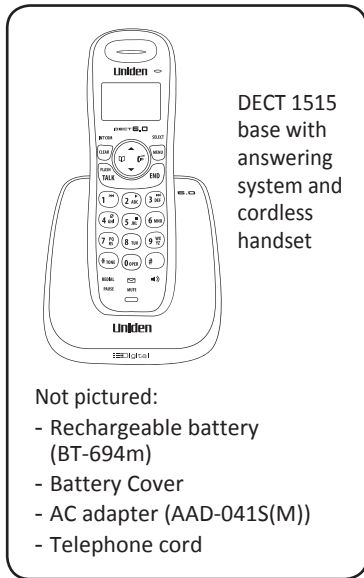


## You will also find:

Accessory handset and charger

Not pictured:

- Rechargeable battery (BT-694m)
- Battery cover
- AC adapter (AAD-600S(M))

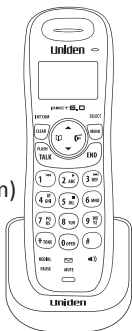

If you purchased model number:	You should have:
DECT 1515+1	1 of each
DECT 1515+2	2 of each
DECT 1515+3	3 of each

- If any items are missing or damaged, contact your place of purchase immediately. Never use damaged products!
- Need Help? Get answers at our website:

[www.uniden.com.au](http://www.uniden.com.au) for Australian model  
[www.uniden.co.nz](http://www.uniden.co.nz) for New Zealand model


# CONTENTS


<b>Getting Started</b> .....	<b>5</b>
Installing Your Phone .....	5
Charge the Battery .....	5
Connect the Telephone .....	6
Test the Connection .....	6
Getting to Know Your Phone.....	7
Part of the base .....	7
Parts of the handset .....	8
Reading the Display .....	10
Using the Menu.....	11
Handset Setup Menu / Day & Time Menu .....	11
Global Setup Menu .....	12
Entering Text on Your Phone .....	12
<b>Using Your Phone</b> .....	<b>13</b>
Basics.....	13
Changing the Volume .....	13
Using the Caller ID and Redial Lists .....	14
Using Call Waiting .....	15
Using the Phonebook.....	16
Phonebook Menu Options / Phonebook Entry Options .....	16
Finding a Lost Handset.....	16
<b>Using Special Features</b> .....	<b>17</b>
Chain Dialing .....	17
Multihandset Features.....	17
Conference Calling .....	17
Privacy Mode / Intercom.....	18
Call Transfer .....	19
Voice Message Notification.....	19
<b>Solving Problems</b> .....	<b>21</b>
Weak or Hard to Hear Audio / Noise or Static on the Line .....	22
Installing a Line Filter or DSL Filter .....	23
Liquid Damage .....	24
AC Adapter and Battery Information .....	25
Mounting the Base on a Wall.....	26
<b>Index</b> .....	<b>28</b>
<b>One-year Limited Warranty</b> .....	<b>30</b>

# GETTING STARTED

## Installing Your Phone

### *Charge the Battery*

1. Unpack all handsets, battery packs, and battery covers. If you need to remove a battery cover, press in on the notch and slide the cover down and off.
  2. Line up the battery connector with the jack inside the handset. (The battery connector will only fit one way.)
  3. Push the connector in until it clicks into place; tug gently on the wires to make sure the battery pack is securely connected.
  4. Replace the battery cover and slide it into place.
  5. Connect the AC adapters to the **DC IN 9V** jacks on the base and on each charger. Set the plugs into the notches.
  6. Plug the other end of the adapters into standard 240V AC outlets.
  7. Place one handset in the base and the other(s) in the charger(s) with the displays facing forward. The charge LED on each handset should light up; if it doesn't, reseal the handset or try plugging the AC adapter into a different outlet.
-  **Charge all handsets completely (about 15 hours) before using them.**

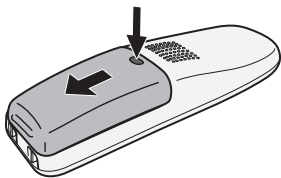

## ***Connect the Telephone Cord***


Use the telephone cord to connect the **TEL LINE** jack on the base to a standard telephone wall jack.

### ***Test the Connection***

1. Pick up the handset from the cradle and press **TALK**. You should hear a dial tone, and the display should say *Talk*.
  - If you don't hear a dial tone or the display says *Check Tel Line*, try checking the connection between the base and the phone jack.
2. Make a quick test call. (Press **END** to hang up.)
  - If there is a lot of noise, see page 22 for tips on avoiding interference.
3. Test all your handsets the same way. If you can't get a dial tone, try moving the handset closer to the base.

# Getting to Know Your Phone


## Parts of the base

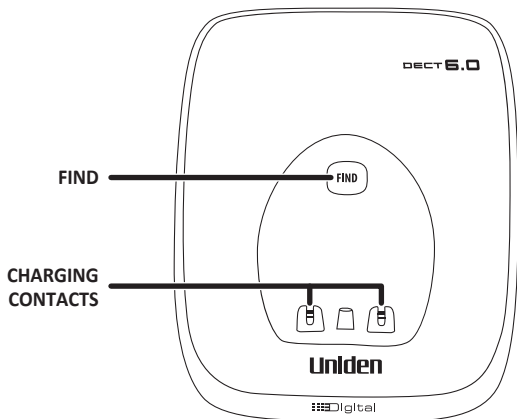

### *Base keys/LEDs and how they work*

Key (icon)	What it does
FIND	- In standby: page all handsets.

## Parts of the handset

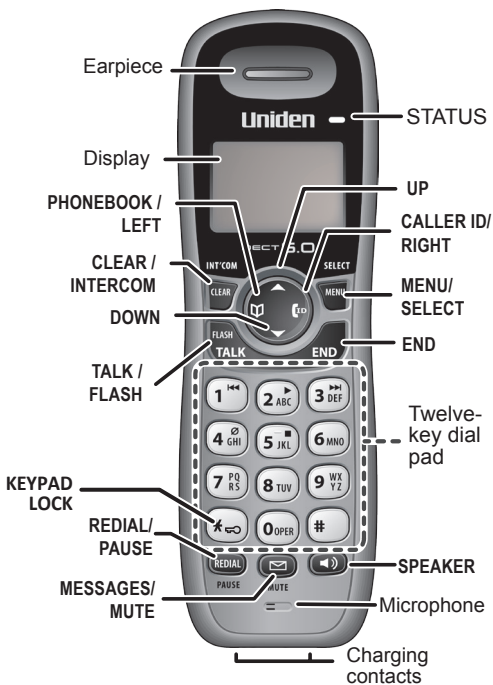

## Handset keys/LEDs and how they work









Key (icon)	What it does
<b>CLEAR / INTERCOM</b>	<ul style="list-style-type: none"> <li>- In standby: start an intercom call.</li> <li>- During a call: put the call on hold and start a call transfer to another handset.</li> <li>- While entering text: delete one character, or press and hold to delete all the characters.</li> </ul>




Key (icon)	What it does
TALK/FLASH	<ul style="list-style-type: none"> <li>- In standby: start a telephone call (get a dial tone).</li> <li>- During a call: switch to a waiting call.</li> </ul>
END	<ul style="list-style-type: none"> <li>- During a call: hang up.</li> <li>- In the menu or any list: exit and go to standby.</li> </ul>
MENU/SELECT	<ul style="list-style-type: none"> <li>- In standby: open the menu.</li> <li>- In the menu or any list: select the highlighted item.</li> </ul>
UP (▲)	<ul style="list-style-type: none"> <li>- In standby: increase the ringer volume.</li> <li>- During a call: increase the audio volume.</li> <li>- In any menu or list: move the cursor up one line.</li> </ul>
DOWN (▼)	<ul style="list-style-type: none"> <li>- In standby: decrease the ringer volume.</li> <li>- During a call: decrease the audio volume.</li> <li>- In any menu or list: move the cursor down one line.</li> </ul>
PHONEBOOK/ LEFT (📖)	<ul style="list-style-type: none"> <li>- In standby or during a call: open the phonebook.</li> <li>- In the menu: go back to the previous screen.</li> <li>- During text entry: move the cursor to the left.</li> </ul>
CALLER ID/ RIGHT (📞ID)	<ul style="list-style-type: none"> <li>- In standby or during a call: open the Caller ID list.</li> <li>- During text entry: move the cursor to the right.</li> </ul>
REDIAL/ PAUSE	<ul style="list-style-type: none"> <li>- In standby: open the redial list.</li> <li>- While entering a phone number: insert a 2-second pause.</li> </ul>
MESSAGES/ MUTE (📧)	<ul style="list-style-type: none"> <li>- During a call: mute the microphone.</li> <li>- If the phone is ringing: mute the ringer for this call only. Applies to individual handset ringer only.</li> </ul>
KEYPAD LOCK (🔒)	<ul style="list-style-type: none"> <li>- In standby: press and hold to lock or unlock the keypad.</li> </ul>
SPEAKER (🔊)	<ul style="list-style-type: none"> <li>- Switch a normal call to the speakerphone (&amp; back).</li> </ul>
LED	<b>What it means</b>
STATUS	<ul style="list-style-type: none"> <li>- On: the battery is charging.</li> <li>- Blinking: there are new messages.</li> </ul>

## Reading the Display

This table shows possible status icons and what they mean. Since the icons appear based on what you're doing with the phone, you won't ever see all of these icons at the same time.

Icon	What it means
	The ringer is turned off and will not ring for new calls.
	You have a voice message waiting.
	Privacy Mode is on: no other handset can join the call.
	The speakerphone is on.
	The microphone is muted; the caller can't hear you.
	T-coil mode is on (see page 22).
	The battery is 1) fully charged, 2) half charged, 3) getting low, or 4) empty.
	Enter 1) capital or 2) lower case letters (see page 12).

## Using the Menu

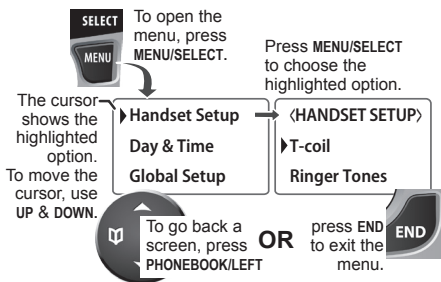

- If you open the menu during a call, use **LEFT** to back out of the menu without hanging up.
- If you don't press any keys for about thirty seconds, the handset exits the menu.

### Handset Setup Menu

You can change these settings separately for each handset.

<i>T-coil</i>	Turn on T-coil mode to reduce noise on some hearing aids (for more details, see page 22).
<i>Ringer Tones</i>	Choose this handset's ring tone. As you highlight each ring tone, the phone plays a sample. When you hear the tone you want, press <b>MENU/SELECT</b> .
<i>AutoTalk</i>	Have this handset answer a call when you pick it up from the cradle (without pressing any buttons).
<i>Any Key Answer</i>	Have this handset answer a call when you press any key on the 12-key dialpad.
<i>Banner</i>	Change the name used on the handset's display.
<i>Key Touch Tone</i>	Have the keypad sound a tone when you press a key.

### Day & Time Menu

Use this menu to set the clock manually. (If you have Caller ID, the phone sets the day and time from the CID data.) Select the day of week, then use the number keypad to enter the hour and minutes in HHMM format (e.g., enter 0345 for 3:45). Then, select AM or PM.

## Global Setup **Menu**

The settings on this menu affect all handsets. Only one handset at a time can change these menu options.

<i>Set Line Mode</i>	Do not change this setting unless instructed to by customer service.
<i>Insert 0</i>	This feature adds "0" or "00" at the beginning of the number received from Caller ID. The default setting for New Zealand is ON. The default setting for Australia is OFF.
<i>Edit Voice Mail</i>	If you subscribe to a Voice Mail service you can set the Voice Mail number (see page 19).
<i>VMWI Reset</i>	Reset your Visual Message Waiting Indicator to bring it back in sync with your voice mail service.

## **Entering Text on Your Phone**

Use the 12-key dial pad when you want to enter text into your phone (a name in the phonebook, the handset banner, etc.).

- The phone defaults to a capital letter for the first letter and any letter after a space; otherwise, it uses small letters.
- To switch to all capital letters, press **\***. The phone defaults to all capital letters first (e. g. ABCabc2) until you enter a blank space or press **\*** again. (Any time you want to change case, just press **\***.)
- If two letters in a row use the same number key, enter the first letter and wait a few seconds (or press **RIGHT**); the cursor will move to the next space. Enter the next letter.
- Press **#** to enter a blank space.
- To change a letter, move the cursor to that letter and press **CLEAR** to erase the letter. Then, enter the new one.
- To erase the entire entry, press and hold **CLEAR**.
- Press **0** to cycle through all available symbols and punctuation.

# USING YOUR PHONE

## Basics

To...	Earpiece	Speakerphone
make a call: Dial the number, then	Press <b>TALK/FLASH</b> .	Press <b>SPEAKER</b> .
answer a call	Press <b>TALK/FLASH</b> .	Press <b>SPEAKER</b> .
hang up	Press <b>END</b> or put the handset in the cradle.	
switch between the speaker & earpiece	Press <b>SPEAKER</b> .	
mute the microphone during a call	Press <b>MESSAGES/MUTE</b> . Press again to turn the microphone back on.	
put a call on hold	Press <b>CLEAR/INTERCOM</b> . After 5 minutes on hold, the call will be disconnected.	
return to a call on hold	Press <b>TALK/FLASH</b> .	Press <b>SPEAKER</b> .
mute the ringer for this call only	While the phone is ringing, press <b>MESSAGES/MUTE</b> . Applies to individual handset ringer only.	

## *Changing the Volume*

You can set speaker volume levels separately for each handset. You can also set the earpiece volume on each handset. Anytime you are listening to a speaker or earpiece, press **UP** to increase the volume and **DOWN** to decrease it.

You can also set the ringer volume separately: when the phone is in standby, press **UP** to increase the ringer volume and **DOWN** to decrease. If you turn the ringer volume all the way down, the ringer turns off.

## Using the Caller ID and Redial Lists

Caller ID (CID) is a service available from your telephone provider that shows the phone number (and sometimes the caller's name) of incoming calls. Contact your telephone provider for more information.

Caller ID list	Redial list
<ul style="list-style-type: none"><li>- When a call comes in, the phone displays the number and name (if available) of the caller.</li><li>- The phone saves the information for the last 30 received calls to the <i>CID list</i>.</li><li>- When it's in standby, the handset shows how many calls came in since the last time you checked the CID list.</li></ul>	<ul style="list-style-type: none"><li>- Each handset remembers the last 5 numbers you dialed on it. The redial list is separate for each handset.</li></ul>

 **All handsets share the CID list; only one handset can access the CID list at a time.**

To...	Follow these steps:
Open the CID list	Press <b>CALLER ID/RIGHT</b> .
Open the redial list	<b>REDIAL/PAUSE</b> .
Scroll through the lists	Press <b>DOWN</b> to scroll from newest to oldest. Press <b>UP</b> to scroll from oldest to newest.
Dial a number from the lists	Highlight the number you want and press <b>TALK/FLASH</b> or <b>SPEAKER</b> .*
Close the lists	Press <b>PHONEBOOK/LEFT</b> .

\* If the number is a toll or long distance call, but there's no **1** at the front of the CID record, press **\*** to add the **1** before dialing.

To select a number, highlight the number and press **MENU/SELECT**. The phone gives you the following options:

<i>Delete Entry</i>	Erase the number from the list.
<i>Store Into PB</i>	Add the number to the phonebook. The handset prompts you to edit the name and number.
<i>Delete All</i>	(CID list only) Erase all numbers from the list.

## ***Using Call Waiting***

Call Waiting, a service available from your telephone provider, lets you receive calls while you are on another call. Caller ID on Call Waiting (CIDCW) service displays Caller ID information for a waiting call.

For Australian model:

Press **TALK/FLASH** and then press **2** to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** and then **2** again.

For New Zealand model:

Press **TALK/FLASH** on the handset to accept the waiting call. The first caller is put on hold, and you will hear the new caller after a short pause. To return to the original caller, press **TALK/FLASH** again.

## Using the Phonebook

The phone can store up to 70 entries in its phonebook. All handsets share the same phonebook, so only one handset may access the phonebook at a time.

To...	Press...
Open/close the phonebook	<b>PHONEBOOK/LEFT.</b>
Scroll through the entries	<b>DOWN</b> (to scroll through the phonebook from A to Z) or <b>UP</b> (to scroll from Z to A).
Jump to entries that start with a certain letter	the number key corresponding to the letter you want.
Dial an entry	<b>UP</b> or <b>DOWN</b> to find the entry you want to dial, then press <b>TALK/FLASH</b> or <b>SPEAKER</b> .

### ***Phonebook Menu Options***

Open the phonebook with the phone in standby, then press **MENU/SELECT** to open the phonebook menu. Choose one of these options:

<i>Create New</i>	Add an entry to your phonebook. The phone prompts you to enter a name and number.
<i>Delete All</i>	Erase all the entries in the phonebook.

- If you need the phone to pause before sending the next set of digits, press **REDIAL/PAUSE** to insert a 2-second pause. The pause shows as a **P** in the display.
- You can insert as many pauses as you need, but each pause counts as one of your 20 digits.

### ***Phonebook Entry Options***

With the phone in standby, open the phonebook and find the entry you want. Press **MENU/SELECT** to open the individual phonebook entry menu. The phone prompts you to edit or delete the entry.

## Finding a Lost Handset

With the phone in standby, press **FIND** on the base. All the handsets will beep in a 3-beep pattern for 1 minute or until you press **FIND** again. You can also end the page by pressing any key from the found handset.



# USING SPECIAL FEATURES

## Chain Dialing

If you often have to enter a series of digits or a code number during a call, you can save that code number to a phonebook entry and use the phonebook to send the code number.

1. Enter the code number (up to 20 digits) into the phonebook just like a regular phonebook entry. Be sure to enter the code number into the phonebook exactly as you would enter it during a call.
2. When you hear the prompt that tells you to enter the number, open the phonebook and find the entry that contains your code number. Press **MENU/SELECT** to transmit the code. The phone transmits the code number entered in the previous step. If you change your mind, use **PHONEBOOK/LEFT** to close the phonebook.

## Multihandset Features

### *Conference Calling*

When an outside call comes in, two handsets can join in a conference call with the outside caller.

- To join the call, just press **TALK/FLASH** or **SPEAKER**.
- To leave the conference call, hang up normally; the other handset remains connected to the call.

## Privacy Mode

To prevent other handsets from joining a call:

1. Start your call as usual, then press **MENU/SELECT**. The display shows *Call Privacy*.
2. Press **MENU/SELECT** again to turn privacy mode on (you'll see a **P** in the display).
  - Privacy mode turns off automatically when you hang up.
  - As long you have privacy mode on, no other handsets can interrupt your call. To accept another handset in the call, turn privacy mode off by repeating the process above (press **MENU/SELECT** twice).

## Intercom

- Whenever the phone is in standby, you can make an intercom call between handsets without using the phone line.
- You can make an intercom call from any handset, but only two handsets can be in an intercom call at any time.
- If an outside call comes in during an intercom page, the phone cancels the page so you can answer the incoming call.
- If an outside call comes in during an intercom call, press **TALK/FLASH** to hang up the intercom call and answer the outside call.

To...	Follow these steps:
make an intercom page	1. Press <b>CLEAR/INTERCOM</b> . 2. Select the handset you want to talk with, or <i>All</i> to page all handsets at the same time.
cancel a page	Press <b>END</b> .
answer a page	Press <b>CLEAR/INTERCOM</b> or <b>TALK/FLASH</b> .
end an intercom call	Press <b>END</b> . Both handsets return to standby.

## Call Transfer

To...	Follow these steps:
transfer a call	<ol style="list-style-type: none"><li>1. Press <b>CLEAR/INTERCOM</b> to put the call on hold.</li><li>2. Select the handset you want to page (select <i>All</i> to page all handsets at the same time).</li><li>3. When another handset accepts the call, you'll be disconnected (press <b>TALK/FLASH</b> to rejoin the call).</li></ol>
cancel a transfer	Press <b>TALK/FLASH</b> to return to the call.
accept a transferred call	<ol style="list-style-type: none"><li>1. To answer the page and speak to the transferring handset using the intercom, press <b>CLEAR/INTERCOM</b>.</li><li>2. To speak to the outside caller, press <b>TALK/FLASH</b>.</li></ol>

## Voice Message Notification

- If you subscribe to a voice mail service, your phone can notify you when you have a new message waiting. This feature supports Frequency-Shift Keying (FSK) message notification. Contact your voice mail provider for information.
- When you have new messages, the voice message icon appears in the display, and the **STATUS** light on the handset blinks.
- After you listen to your messages, the voice message icon turns off. If it doesn't, you can reset it: With the phone in standby, open the menu and select *Global Setup*; select *VMWI Reset*, then select *Yes*.

## ***Setting Up Your Voice Mail***

When you sign up for a voice mail service, your service provider should give you an *access number*. If you don't have this information, contact your provider before you start.

1. With the phone in standby, open the menu.
2. Select *Global Setup*, then select *Edit Voice Mail*. For the New Zealand model the Spark access number (083210) is preprogrammed.
3. Enter your access number exactly as you would dial it. You can enter a total of 20 digits. If you need the phone to wait for a few seconds between digits (to wait for the service to answer, for example), press **REDIAL/PAUSE** to insert a 2-second pause. If two seconds isn't long enough, you can insert as many pauses as you need, but each pause counts as one digit. Press **SELECT/MENU** when you're finished.

## ***Getting Your Messages***

1. Press **MESSAGES** (✉)/**MUTE** and then **MENU/SELECT** to dial the access number you programmed into this handset.

## ***Resetting the voice message indicator***

If the voice message icon remains after you check your messages, you can reset it.

1. With the phone in standby, open the menu.
2. Select *Global Setup*, then select *VMWI Reset*.
3. Select Yes.

# SOLVING PROBLEMS

If you have any trouble with your phone, try these simple steps first. If you need help, visit our website listed on the front cover.

If...	Try...
No handsets can make or receive calls.	<ul style="list-style-type: none"><li>- Checking the telephone cord connection.</li><li>- Disconnecting the base AC adapter. Wait a few minutes, then reconnect it.</li><li>- Making sure the base is plugged in.</li></ul>
A handset can't make or receive calls.	<ul style="list-style-type: none"><li>- Moving the handset closer to the base.</li></ul>
A handset can make calls, but it won't ring.	<ul style="list-style-type: none"><li>- Making sure the ringer is turned on.</li></ul>
A handset is not working.	<ul style="list-style-type: none"><li>- Charging the battery for 15-20 hours.</li><li>- Checking the battery connection.</li></ul>
A handset says <i>Unavailable</i> .	<ul style="list-style-type: none"><li>- Moving the handset closer to the base.</li><li>- Seeing if another handset is in Privacy Mode.</li></ul>
No handsets display Caller ID information.	<ul style="list-style-type: none"><li>- Letting calls ring twice before answering.</li><li>- Making sure your Caller ID service is active.</li></ul>
Caller ID displays briefly & then clears.	<ul style="list-style-type: none"><li>- You may have to change the line mode. Contact Customer Service for instructions.</li></ul>
I can't transfer calls.	<ul style="list-style-type: none"><li>- You may have to reset the handset. Contact Customer Service for instructions.</li></ul>
Two handsets can't talk to the caller.	<ul style="list-style-type: none"><li>- Making sure no handset is in Privacy Mode.</li></ul>
When I answer on an extension, the phone keeps ringing.	<ul style="list-style-type: none"><li>- You may have to change the line mode. Contact Customer Service for instructions.</li></ul>

## ***Weak or Hard To Hear Audio***

If a caller's voice sounds weak or soft, the signal might be blocked by large metal objects or walls; you might also be too far from the base, or the handset's battery may be weak.

- Try moving around while you're on a call or moving closer to the base to see if the sound gets louder.
- Make sure the handset's battery is fully charged.
- Try adjusting the earpiece volume.

### **Do you use a T-Coil hearing aid?**

- If you have a hearing aid equipped with a telecoil (T-coil) feature, the interaction between the hearing aid & digital cordless phones can cause noise in the handset. If you have a T-coil hearing aid & you have problems with noise on the line, try turning on *T-coil* mode. Open the menu. Select *Handset Setup*, then select *T-coil*.
- Using T-coil mode can shorten the handset's talk time; make sure to watch the battery status and keep the battery charged.

## ***Noise or Static on the Line***

Interference is the most common cause of noise or static on a cordless phone. Here are some common sources of interference:

- electrical appliances, especially microwave ovens
- computer equipment, especially wireless LAN equipment and DSL modems
- radio-based wireless devices, such as room monitors, wireless controllers, or wireless headphones or speakers
- fluorescent light fixtures (especially if giving off a buzzing noise)
- other services that use your phone line, like alarm systems, intercom systems, or broadband Internet service

If static is on 1 handset or in 1 location:	If static is on all handsets or in all locations:
<ul style="list-style-type: none"> <li>- Check nearby for one of the common interference sources.</li> <li>- Try moving the handset away from a suspected source, or try moving the suspected source so it's not between the handset and the base.</li> <li>- There is always more noise at the edges of the base's range. If an <i>Out of Range</i> message displays, try moving closer to the base.</li> </ul>	<ul style="list-style-type: none"> <li>- Check near the base for the source of interference.</li> <li>- Try moving the base away from a suspected source, or turn off the source if possible.</li> <li>- If the base has an adjustable antenna, try raising the antenna so it stands straight up.</li> <li>- If you have any service that uses the phone line, you might need a filter (see below).</li> </ul>

### ***Installing a Line Filter or DSL Filter***

Sometimes, broadband Internet services that use the telephone line can interfere with phones. One of these services—DSL—often causes static on telephones. A DSL filter or telephone line filter usually solves this problem. The technician who installed your DSL service might have left some filters for you; if not, call your DSL provider or look in any electronics store.

Plug the DSL filter into the telephone wall jack and plug your phone's base into the filter. Make a test call to make sure the noise is gone.

## **Liquid Damage**

Moisture and liquid can damage your cordless phone.

- If the exterior housing of the handset or base is exposed to moisture or liquid, wipe off the liquid, and use as normal.
- If moisture or liquid is inside the plastic housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base), follow these steps:

<b>Handset</b>	<b>Base</b>
<ol style="list-style-type: none"><li>1. Remove the battery cover and disconnect the battery.</li><li>2. Let dry for at least 3 days with the battery disconnected and the cover off.</li><li>3. After the handset dries, reconnect the battery and replace the cover. Recharge the battery fully (15-20 hours) before using.</li></ol>	<ol style="list-style-type: none"><li>1. Disconnect the AC adapter to cut off the power.</li><li>2. Disconnect the telephone cord.</li><li>3. Let dry for at least 3 days before reconnecting.</li></ol>

**CAUTION! DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.**



## AC Adapter and Battery Information

- Use only the supplied AC adapters. Be sure to use the proper adapter for the base & any chargers.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Do not place the unit in direct sunlight or subject it to high temperatures.
- Fully charged, the battery should provide about 7 hours of talk time and about 6 days of standby time. For best results, return the handset to the cradle after each call to keep it fully charged.

AC adapter		Base/Charger
	Part number	AAD-041S(M) / AAD-600S(M)
	Input voltage	240V AC, 50 Hz
	Output voltage	9V DC @350mA / 9V DC @210mA
Battery pack	Part number	BT-694m
	Capacity	300mAh, 2.4V DC

- When the battery gets too low, the handset shows a low battery alert. If you hear a strange beep during a call, check the display: if you see the low battery alert, finish your conversation as quickly as possible and return the handset to the cradle. If the handset is in standby, none of the keys will operate.
- With normal use, the battery should last about one year. Replace the battery when the talk time becomes short even when the battery is charged. To buy a replacement battery, call the Parts Department listed on the front cover.

## Rechargeable Nickel-Metal Hydride Battery Warning


- This equipment contains a rechargeable Nickel-Metal Hydride (Ni-MH) battery.
- Do not short-circuit the battery.
- The rechargeable Ni-MH batteries contained in this equipment may explode if disposed of in a fire.
- Do not charge the battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause it to explode.


## Mounting the Base unit on a Wall

You can mount your base directly to the wall using the horizontally aligned mounting slots at the back of the base unit. Before doing this, consider the following:

- Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Mount your phone within distance of a working phone jack.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use screws with anchoring devices suitable for the wall material where the base unit will be placed.

1. Insert two mounting screws into the wall (with their appropriate anchoring device), 60mm apart. **Note the horizontal alignment of the screw holes!** Allow about 2mm between the wall and screwheads for mounting the phone.

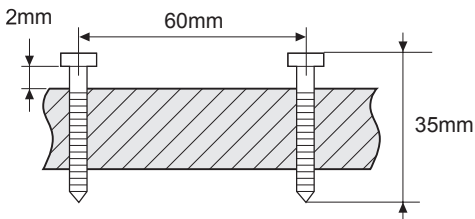

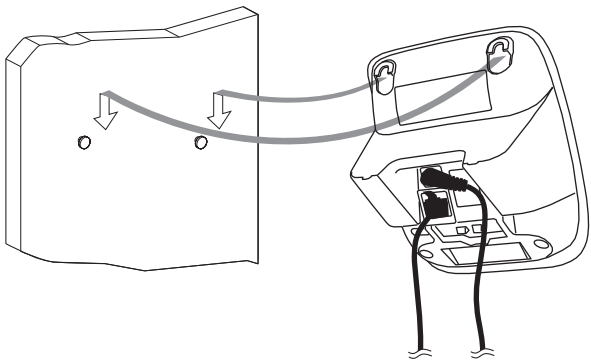

2. Plug the AC adapter into the **DC IN 9V** jack on the telephone and then into a Standard AC wall outlet.
3. Plug the telephone cord into the **TEL LINE** jack on the telephone and then into the telephone socket on the wall.
4. Align the mounting slots on the base with the mounting posts on the wall.
5. Then push in and down until the phone is firmly seated.

### ***Optional Wall Mount Bracket***

An optional wall mount bracket can be purchased from our online store to mount the base to a standard wall plate that has vertically aligned mount holes. Visit our website; [www.uniden.com.au](http://www.uniden.com.au) for Australia or [www.uniden.co.nz](http://www.uniden.co.nz) for New Zealand.

# INDEX

<b>A</b>	
Any Key Answer.....	11
AutoTalk.....	11
<b>B</b>	
Banner.....	11
Battery	
Preparing and charging.....	5
Replacement and handling.....	25
<b>C</b>	
Caller ID	
Caller ID service.....	14
Calling.....	14
Call Waiting.....	15
Deleting.....	14
Storing.....	14
Using.....	14
Viewing.....	14
Call transfer feature.....	19
Chain dialing.....	17
Clock (see Day & Time)	
Conference Calling.....	17
<b>D</b>	
Day & Time.....	11
<b>E, F, G</b>	
Earpiece volume.....	13
Find handset.....	16
<b>H</b>	
Hands-free conversation.....	13
<b>I, J, K, L</b>	
Intercom.....	8, 18
Insert Zero.....	12
Keypad Lock.....	9
Key Touch Tone.....	11
Line Filter.....	23
Liquid Damage.....	24

# INDEX

## M, N, O

Making a call.....	13
Mute.....	9, 13
Noise.....	22

## P, Q

Package contents.....	3
Paging handset (see Find handset)	
Phonebook.....	16
Editing.....	12, 16
Erasing.....	16
Making calls.....	16
Storing.....	16
Viewing.....	16
Chain dialing.....	17
Privacy mode.....	18

## R

Receiving a call.....	13
Redialing a call.....	14
Ringer volume.....	13

## S

Setting up	
base unit.....	5, 6
extra handset.....	5, 6
handset.....	5, 6
Static (see Noise)	

## T, U, V

Transferring a call.....	19
Troubleshooting.....	21
Voice Mail.....	12, 19
Programming.....	20

## W, X, Y, Z

Wall Mounting the Base.....	26
Warranty.....	30

# ONE-YEAR LIMITED WARRANTY

## UNIDEN DECT 1515, DECT 1515+1/+2/+3

**IMPORTANT** Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

**Warrantor:** The warrantor is either Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”) or Uniden New Zealand Limited (“Uniden NZ”) as the case may be.

**Terms of Warranty:** Uniden Aust/NZ warrants to the original retail purchaser only that the DECT 1515, DECT1515+1/+2/+3 (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

**Warranty period:** This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand and will expire one (1) year from the date of the original retail sale.

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust or Uniden NZ;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

**Parts Covered:** This warranty covers the Product and included accessories.

**User-generated Data:** This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

**Statement of Remedy:** If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

**Procedure for obtaining warranty service:** Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden at the addresses shown below. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

**UNIDEN AUSTRALIA PTY LTD**

Service Division  
345 Princes Highway,  
Rockdale, NSW 2216  
Phone number: 1300 366 895  
Email address: [custservice@uniden.com.au](mailto:custservice@uniden.com.au)

**UNIDEN NEW ZEALAND LTD**

Service Division  
150 Harris Road, East Tamaki  
Auckland 2013  
Phone number: (09) 273 8377  
Email address: [service@uniden.co.nz](mailto:service@uniden.co.nz)

**THANK YOU FOR BUYING A UNIDEN PRODUCT.**

**Uniden®**